

User Manual



FRM220A-GSW/SNMP

Gigabit Switch / SNMP Controller



CTC UNION TECHNOLOGIES CO., LTD.

CTC Union Technologies Co., Ltd.
Far Eastern Vienna Technology Center (Neihu Technology Park)
8F, No. 60 Zhouzi St.
Neihu District
Taipei 114
Taiwan
Tel: +886-2-26591021
Fax: +886-2-27991355
Email: techsupport@ctcu.com
URL: <http://www.ctcu.com>

FRM220A-GSW/SNMP Operation Manual

Gigabit Switch / SNMP Card
Ethernet Aggregate Rack, 20 Slot, 2U

Version 1.0 September 9, 2011 (Release)
Version 1.01 September 26, 2011 (update)

Copyright © 2010-2011, CTC Union Technologies, Inc.
All rights reserved.



All specifications are subject to change without prior notice.

Legal

The information in this publication has been carefully checked and is believed to be entirely accurate at the time of publication. CTC Union Technologies assumes no responsibility, however, for possible errors or omissions, or for any consequences resulting from the use of the information contained herein. CTC Union Technologies reserves the right to make changes in its products or product specifications with the intent to improve function or design at any time and without notice and is not required to update this documentation to reflect such changes.

CTC Union Technologies makes no warranty, representation, or guarantee regarding the suitability of its products for any particular purpose, nor does CTC Union assume any liability arising out of the application or use of any product and specifically disclaims any and all liability, including without limitation any consequential or incidental damages.

CTC Union products are not designed, intended, or authorized for use in systems or applications intended to support or sustain life, or for any other application in which the failure of the product could create a situation where personal injury or death may occur. Should the Buyer purchase or use a CTC Union product for any such unintended or unauthorized application, the Buyer shall indemnify and hold CTC Union Technologies and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, expenses, and reasonable attorney fees arising out of, either directly or indirectly, any claim of personal injury or death that may be associated with such unintended or unauthorized use, even if such claim alleges that CTC Union Technologies was negligent regarding the design or manufacture of said product.

TRADEMARKS

Microsoft is a registered trademark of Microsoft Corp.

EcoEthernet™, ActiPHY™, and PerfectReach™ are trademarks of Vitesse®.

WARNING:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual may cause harmful interference in which case the user will be required to correct the interference at his own expense. NOTICE: (1) The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. (2) Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

CISPR PUB.22 Class A COMPLIANCE:

This device complies with EMC directive of the European Community and meets or exceeds the following technical standard. EN 55022 - Limits and Methods of Measurement of Radio Interference Characteristics of Information Technology Equipment. This device complies with CISPR Class A.

CE NOTICE

Marking by the symbol CE indicates compliance of this equipment to the EMC and LVD directives of the European Community. Such marking is indicative that this equipment meets or exceeds the following technical standards: EN 55022:2006, Class A, EN55024:1998+A1:2001+A2:2003, and EN60950-1:2001

Chapter 1 Introduction.....	7
1.0 Introduction.....	7
1.1 Brief Functional Description.....	7
1.2 Card Options	7
1.3 System Block Diagram	7
1.4 Chassis Front Description	8
1.5 Chassis Rear Description	8
1.6 Chassis Specifications.....	9
1.7 GSW/SNMP (Aggregate Switch).....	10
1.8 GSW/SNMP Features/Specifications.....	10
1.9 Installing the GSW/SNMP.....	10
1.9 FRM220A Fault Handling	11
1.9.1 GSW/SNMP card Fault and Replacement.....	11
1.9.2 Media Converter card Fault and Replacement.....	11
1.10 FRM220A Application.....	12
Chapter 2 Telnet Provisioning.....	13
2.1 Introduction.....	13
2.2 IP Address Setup.....	13
2.2.1 Read IP Address	13
2.2.2 Telnet Login	14
2.2.3 TCP/IP Configuration.....	15
2.2.4 Chassis Information and Alarm setup.....	18
2.2.5 User Password Setup	20
2.2.6 Upgrading the GSW/SNMP	20
Chapter 3 Web Based Management.....	21
3.1 Introduction.....	21
3.2 Web Based Management Operation.....	21
3.2.1 Introduction	21
3.2.2 Web Login.....	21
3.2.3 Alias Configuration	22
3.2.4 SNMP Configuration.....	23
3.2.5 Local/Remote Area.....	23
3.2.6 System	24
3.2.7 Switch.....	27
3.2.8 Ports Aggregation.....	29
3.2.9 Ports VLAN.....	29
Chapter 4 Troubleshooting	31
4.1 Network Settings.....	31
4.1.1 Review TCP/IP Settings	31
4.1.2 Review Manager Settings.....	32
Appendix A. FRM220A Cards Options.....	33
A.0 Introduction.....	33
A.1 FRM220A-iMUX In-band Managed Inverse Multiplexer	33
A.1.1 Web Management.....	34
A.2 FRM220A-E1/Data DSU/CSU Converter Card.....	37
A.2.1 Web Management.....	38
A.3 FRM220A-Eoe1 Ethernet over E1 Converter.....	43
A.3.1 Web Management.....	44
A.4 FRM220A-1000EAS/X In-band (802.3ah) Managed Fiber Gigabit Media Converter.....	45
A.4.1 Functional Details	46
A.4.2 Block Diagram of 1000EAS/X.....	49
A.4.3 1000EAS/X Stand-alone Telnet Configuration	49

Chapter 1 Introduction

1.0 Introduction

Thank you for choosing the **FRM220A** Ethernet Aggregate Fiber Media Converter Rack. If you would like to skip right to the provisioning of the Gigabit Ethernet switch, proceed to Chapter 2.

This manual is used to explain the configuration of the **FRM220A-GSW/SNMP** (Gigabit Switch / SNMP Controller) and operating procedures. This manual is divided into 4 Sections, the Introduction, Provisioning, Web Based Management and Trouble Shooting, plus the Appendices. The Appendices include the details for each card, pin assignments of special cables and gives further information on options for placing the device in service.

The divisions of the manual are intended for use by personnel to answer questions in general areas. Planners and potential purchasers may read the Introduction to determine the suitability of the product to its intended use; Installers should read the **FRM220A Hardware Installation Manual** and the Cabling Specification Appendix in this manual; Operating Personnel would use the Provisioning and Web Based Management Chapters and Appendices to become familiar with the various media converter cards and settings. Network Administrators should read the chapters on Provisioning, Web Based Management and Trouble Shooting to become familiar with the diagnostic capabilities, network settings and management strategies for the SNMP managed chassis with GSW/SNMP.

1.1 Brief Functional Description

The **FRM220A-CH20** is a 2U, 19(23)", 20 slot modular media converter rack. The **FRM220A-CH20** provides an economic solution in high density Ethernet Fiber Converter installations for FTTx, Metro LAN, or in enterprises, campus and central offices. All critical components such as power modules, fans assemblies, management modules and interface cards are hot swappable, allowing online field replacement. Additional features allow the **FRM220A-CH20** to detect the working or failing status either of two redundant power modules or any fan assembly in the unit and activate relays that can be used to control external alarm devices.


The **FRM220A-CH20** has a total of 20 slots in the front of the chassis with all 20 slots available for installation of **FRM220A** converter cards. The **FRM220A-GSW/SNMP** or Gigabit Switch Management Card is installed from the rear of the chassis, for local and remote management purposes. Each **FRM220A** card is an independent optical to electrical or optical to optical Ethernet converter. When linked to a compatible **FRM220A** stand-alone converter, complete in-band management is supported. All settings of the line card and remote connected stand-alone device may be managed through any of the available management interfaces.

1.2 Card Options

Currently only two series of cards are available for the **FRM220A**. These are the **iMUX** series of Inverse Multiplexers that support 1, 5, 8, or 16 E1 bundled inverse multiplexers (Ethernet over E1) and the **FRM220A-1000EAS/X**, a 4-port (two SFP and two UTP) gigabit Ethernet L2 switch card. A soon to be released Fast Ethernet card, **FRM220A-FSW301**, features 1 fiber (100Base-FX) port and 3 UTP (10/100M) ports. **FRM220A** cards all feature Ethernet backplane connections that allow aggregation of L2 Ethernet traffic through the **GSW/SNMP** Gigabit Switch.

1.3 System Block Diagram

The **FRM220A-CH20** incorporates a Layer 2 Gigabit Ethernet access switch that provides 1GbE to each of the 20 card slots for Ethernet Aggregation.

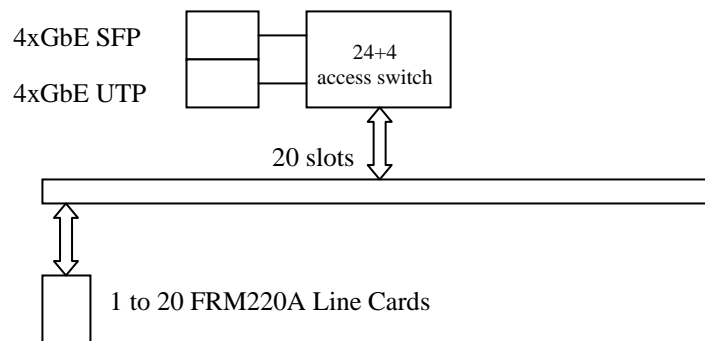

FRM220A Simple Block Diagram

1.4 Chassis Front Description

The front of **FRM220A** contains the line card slots. They are numbered 1 through 20, from left to right as viewed from the front. The typical configuration is with one GSW/SNMP (**Network Management Controller**) card in rear slot and manageable line cards in any front slot numbered 1 through 20.

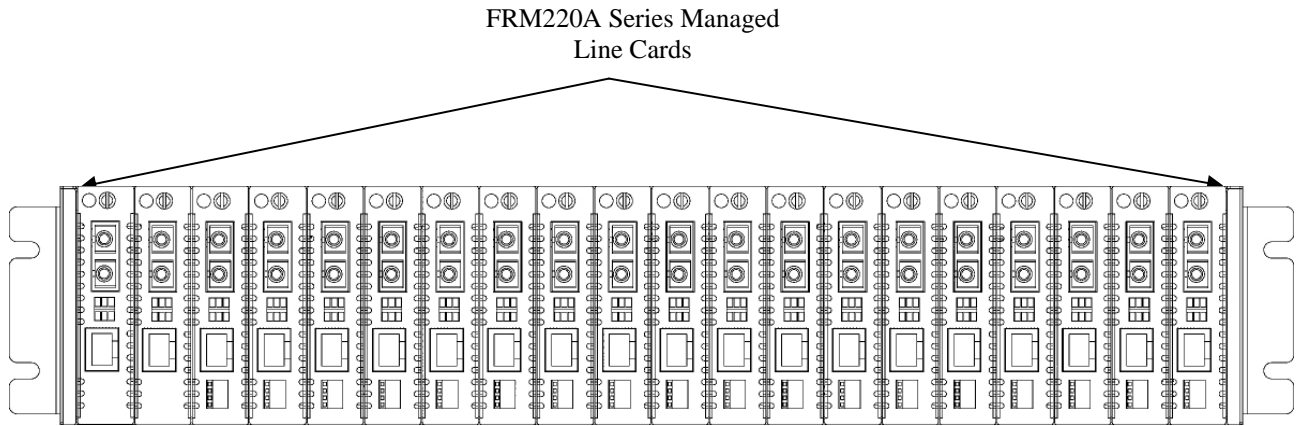


Figure 1-1 Chassis Front View

1.5 Chassis Rear Description

The rear panel holds the aggregate switch card, the **hot-swappable cooling fan modules**, and the **hot-swappable power modules**. The pluggable modules do not require any tools for removal and replacement.

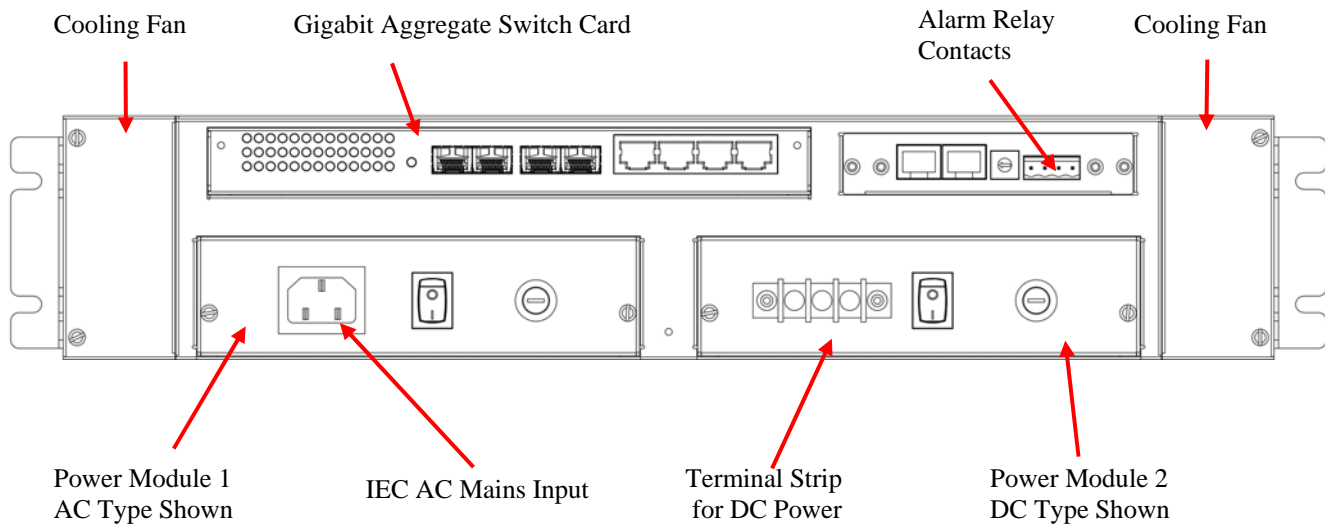


Figure 1-2 Chassis Rear View

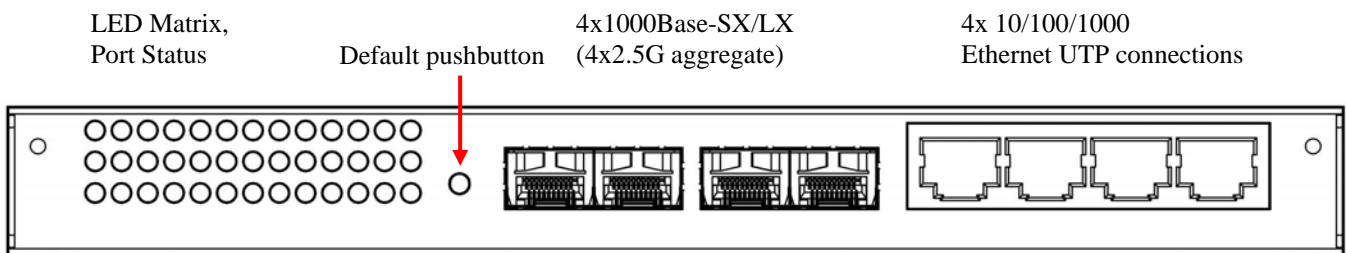


Figure 1-3 GSW/SNMP Card Detail

Note: Press the Default push-button 1~2 seconds to reveal the IP address via the LED matrix display. Pressing the Default pushbutton for 6~8 seconds will reset all configurations, including TCP/IP settings, back to factory default.

1.6 Chassis Specifications

Environment

Temperature -10 - 50°C (14-122°F)
Humidity 5-95% non condensing

Alarm relay contact ratings

125VAC	1A
110VDC	0.6A
30VDC	4A

Power Module Specifications

AC Power Module

Input : Universal, 100~240VAC $\pm 10\%$ at ambient temperature; Frequency : 47~63 Hz
Output : DC 12V, 200W maximum rating (Green power rated, 89% power efficiency)
Connector : C14 (IEC 60320-1)

DC Power Module

Input : -36~75 VDC (option 1)
Input : -18~-36VDC (option 2)
Output : DC 12V, 200W maximum rating
Connector : 3 connector terminal block

AC Power Cord Specification (detachable cord, C13 connector, with national plug per national standards)
6A rated 18AWG (conductors with a minimum cross-section area of 0.75 mm²)

DC Power Cord Specification (wiring must comply with EN 60950-1:2006 standard)
Conductors with a minimum cross-section area of 1mm² (16AWG)

Power Consumption

~120 watts (fully loaded chassis, with random mix of line card types)

Heat Generation

~280 BTU (fully loaded chassis, with random mix of line card types)

Compliance

European Union : EN55022:2006, Class A, EN55024:1998+A1:2001+A2:2003, and EN60950-1:2006
FCC : part 15, subpart B, class A

Reliability

MTTB : >65,000 hours (25°C)

Physical Specifications

Dimensions : 438mm (Width) x 302mm (Depth) x 88mm (Height)
(US: 17 1/4" wide x 11 7/8" deep x 3 1/2" high)
Weight : 4.5Kg (US: ~10 lbs)

AC module weight : 690g (US 1.5 lbs)
DC module weight : 505g (US 1.2 lbs)
Fan module weight : 200g (US 0.5 lbs)
GSW/SNMP card weight : 200g (US 0.25 lbs)

Net Weight : 7.0kgs (US 15 lbs 8 oz)
(with 1 GSW/SNMP, 2 fan modules, 1 AC +1 DC power module & two bracket panels for 19" rack-mounting)

Fully Populated Reference Net Weight: 8.7Kg (US 19.2 lbs.)
(fully loaded, two powers, GSW/SNMP and 20 pcs 5E/ET100 line cards)

1.7 GSW/SNMP (Aggregate Switch)

FRM220A must be ordered with an aggregate Card. The card is placed in the rear of the chassis and provides backplane connection to each card slot. Management is accomplished via Ethernet and any standard SNMP network management software that supports MIB-II. The WEB GUI based interface provides an easy method for the user to operate and monitor the whole system. Almost all line cards support remote in-band configuration when paired with the same type **FRM220A** stand-alone in-band converter.

1.8 GSW/SNMP Features/Specifications

- Web based management
- 20 * 10/100/1000Mbps uplink slots
- 4 * 10/100/1000Mbps Aggregate UTP ports
- 4 * 10/100/1000/2500Mbps Aggregate SFP ports
- 8 k MAC addresses and 4 k VLANs (IEEE Std 802.1Q), as well as 8 k IPv4/IPv6 multicast group support
- QoS classification, based on, for example, IEEE 802.1p, IPv4/IPv6 DSCP, and UDP/TCP ports and ranges
- Rate limitation with a granularity of 64 kbps per port
- Support for 9.6k Jumbo frames
- Supports online firmware update

1.9 Installing the GSW/SNMP

The rear of the **FRM220A** provides slots for the dual power supplies, the two cooling fans and the GSW/SNMP Gigabit Ethernet Aggregate Card. This card may or may not be factory installed. If installing, align the card with the side rails and slide in until the edge connectors just make contact with the back plane. Press the card in firmly using thumbs at both the left and right hand side of the card with equal pressure. Screw in the holding screws and just barely tighten (do NOT over tighten). The card will not come out on its own; it will require significant pulling force to unseat.

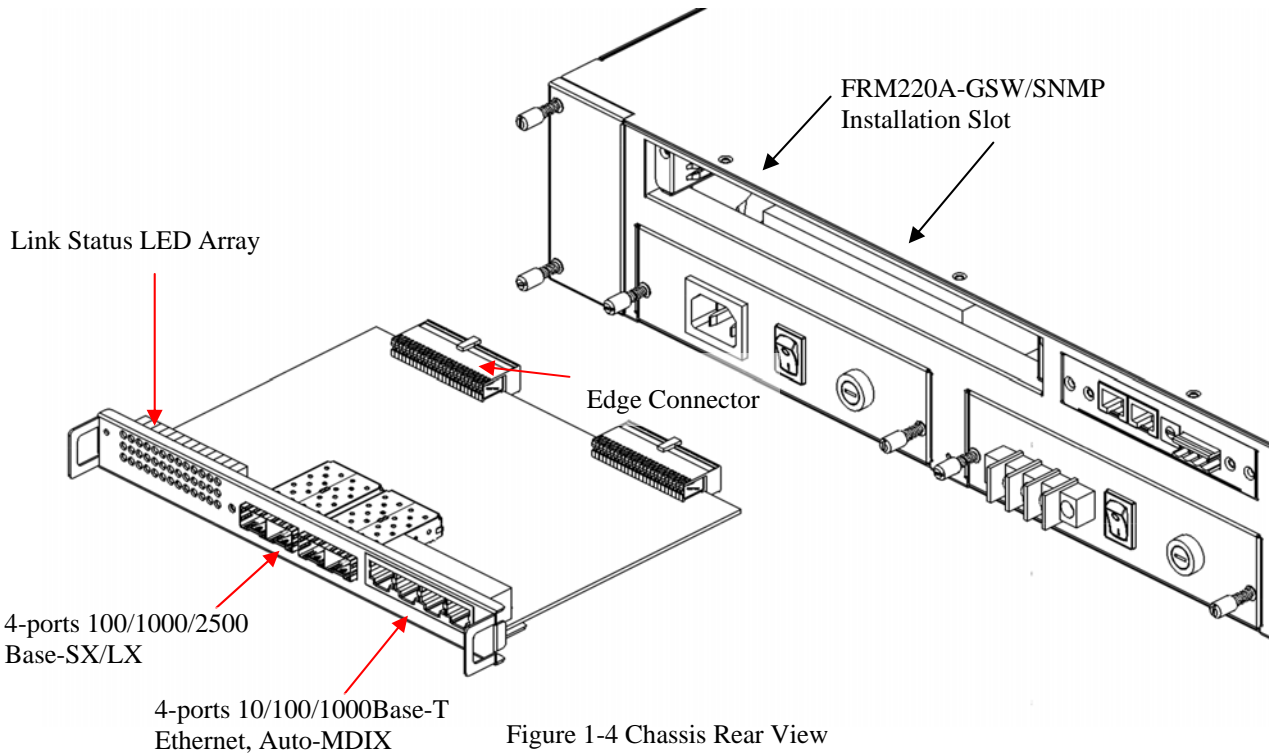


Figure 1-4 Chassis Rear View

1.9 FRM220A Fault Handling

The **FRM220A** management is designed in such a way as to minimize any disruption to normal traffic in the event of any single component failure and to allow rapid recovery of full operations through replacement of FRUs (Field Replaceable Units).

The Power Modules support fully redundant operation. Utilizing a modular design, any mix of AC or DC power sources may be used to supply power to the **FRM220A CH20** Chassis. Power modules are completely "Hot Swappable". As long as one module is able to supply power, the chassis will operate non-stop. Removing any one power module from a two module redundant chassis will not effect the operation of the entire chassis in any manner.

All cards are designed to be "Hot Swappable". This includes any media converter cards as well as the GSW/SNMP card itself. The following points describe what happens logically for any card fault and subsequent replacement.

1.9.1 GSW/SNMP card Fault and Replacement

If the GSW/SNMP card should develop a fault, all media converter cards in the chassis will continue to run with their current configuration settings, however all uplink traffic will be affected. The defective GSW/SNMP may be pulled from the running chassis, without affecting any other media converter card. When a replacement GSW/SNMP is inserted into the "hot" chassis, it will boot and immediately recognize that it is booting into an already running "hot" chassis. The TCP/IP and SNMP settings will either be factory default (if the card was not previously provisioned) or the settings will reflect previous provisioning. All provisioning settings from all the installed media converter cards and all remote media converters will be downloaded into the new GSW/SNMP card and saved. If any future system power off is experienced, all previous settings are restored to each media converter card from the GSW/SNMP.

1.9.2 Media Converter card Fault and Replacement

If a media converter card develops a fault, it may immediately be replaced with a spare media converter card of same type. The new card will be loaded with exactly the same settings as the previous card, from the provisioning settings stored in the GSW/SNMP.

If a media converter card is replaced with a different type media converter in the same slot, the GSW/SNMP will recognize that the card has been changed with different type converter and will upload the factory default for that card.

1.10 FRM220A Application

The **FRM220** is an excellent choice for complimenting fiber infrastructure in Metro LAN, campus, corporate buildings, factories, or in FTTx applications. It can also be deployed in a mobile backhaul application for packet transport. With standard SNMP management, carriers or Internet Service Providers will have confidence to deploy a solution that provides the necessary remote monitoring and configuration features.

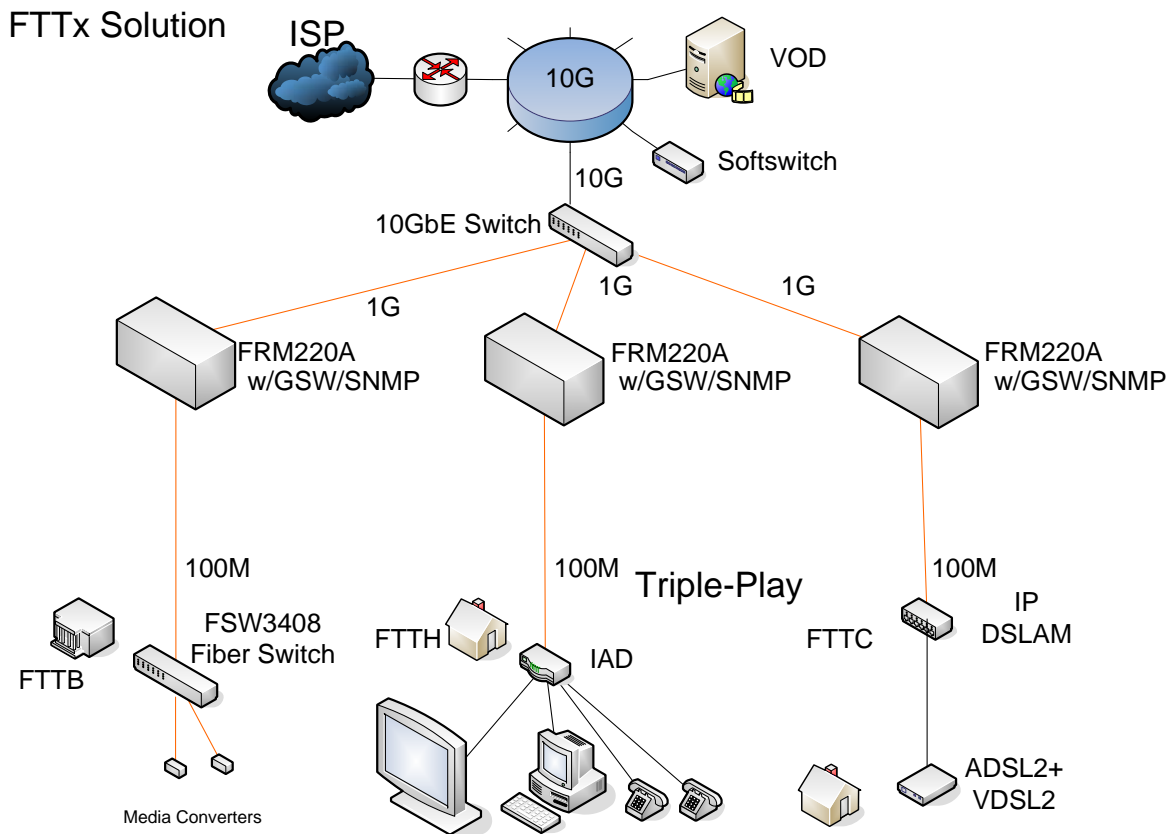


Figure 1-5 Application

Chapter 2 Telnet Provisioning

2.1 Introduction

This chapter will go into the details of the specific provisioning and operation of the **FRM220A**. Broken into two parts, the first part outlines the procedures and functions to setup or determine the TCP/IP configuration. The second section will outline the operation when using a network connection, including the Web based management.

All of the features and controls described in this chapter require the **FRM220A** chassis to have the **GSW/SNMP** (Gigabit Switch SNMP Controller) installed. The Management System is a collection of two control modes for the **FRM220A**. The simplest and most basic mode is "Telnet Console Mode". The Telnet mode is a local or remote control which requires a Telnet connection to the **GSW/SNMP** card. Provisioning and monitoring are performed through a series of menus and menu selection items. All changes made to cards through Telnet are executed immediately or when escaping a menu and do not require any separate 'save' operations. Management via TCP/IP also includes using a web browser or any network management software after compiling the enterprise MIB-II compliant file for **FRM220A-GSW/SNMP**. A MIB browser provides another simple platform for the user to setup using the SNMP protocol remotely.

2.2 IP Address Setup

When delivered from the factory, the GSW/SNMP has default settings as follows:

IP: 192.168.1.1

Netmask: 255.255.255.0


Gateway: 192.168.1.254

The default user ID is 'admin' and password is blank.

2.2.1 Read IP Address

If the IP address has been set but forgotten, use this simple procedure to read the setting.

1. Refer to the back of **FRM220A CH20**, specifically the **GSW/SNMP** card. Note that there is an LED matrix made up of three rows of LEDs with 13 LED in each row. Just to the right of the LED matrix is the 'default' recessed push-button switch.
2. The first five LED in the three rows will form a dot-matrix where numeric information will be displayed, specifically the IP address, character by character. Press the default push button for 1 to 2 full seconds and not more.
3. Immediately the matrix will display the decimal separated IP address, character by character, including the decimal points for about 1 second for each character.
4. Note that the decimal characters are displayed with a 90 degree clock-wise rotation.

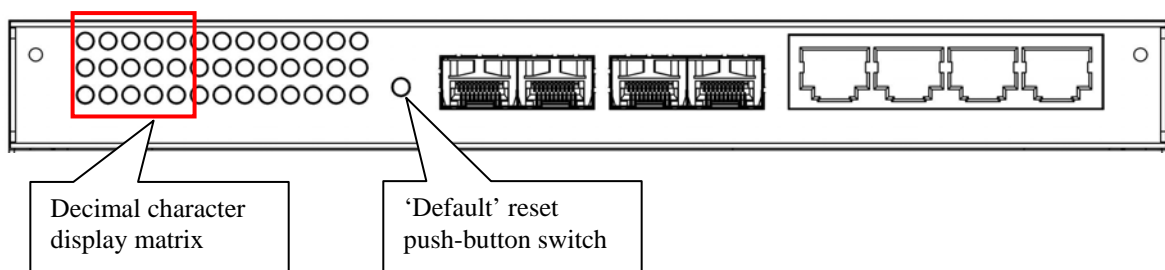

Prior to any initial use of the LAN interfaces on the **GSW/SNMP** card, the configuration settings for networking must be performed. These include the IP address and subnet mask, the network's default gateway, and lastly the IP addresses of the management workstations that will be managing the system via SNMP protocol. The rear panel of the **GSW/SNMP** card provides the connections and indicators.

The LAN connectors are a matrix of LEDs which will be Green to indicate a good link state and flashing to indicate traffic transmission. The LED will not light if there is no link.

A unique feature of the **GSW/SNMP** is the ability to restore all the previous settings in case some unexpected event occurs such as the sudden power loss. After power is restored all the settings will be restored to each line card and remote units that apply.

2.2.2 Telnet Login

To enter "Telnet mode", a user ID (default is admin) is required and a password may be required. By default, there is no password set from the factory. The user password provides security to protect the system.

```

CTC UNION TECHNOLOGIES CO., LTD.      FRM220A-GSW/SNMP      VER.[1.021]
=====
This Chassis ID:[00]      Cascaded:[No ]      Monitored Chassis ID:[00]

User ID:admin
Password:

```

After entering the correct password, you will see the main menu display on the screen as follows :

```

CTC UNION TECHNOLOGIES CO., LTD.      FRM220A-GSW/SNMP      VER.[1.021]
=====
This Chassis ID:[00]      Cascaded:[No ]      Monitored Chassis ID:[00]

<1>:SLOT #01 -----      <B>:SLOT #11 -----
<2>:SLOT #02 FRM220A-8E1/ET100T      <C>:SLOT #12 -----
<3>:SLOT #03 FRM220A-8E1/ET100T      <D>:SLOT #13 -----
<4>:SLOT #04 FRM220A-Eoe1      <E>:SLOT #14 -----
<5>:SLOT #05 FRM220A-E1/DATA      <F>:SLOT #15 -----
<6>:SLOT #06 FRM220A-5E1/ET100T      <G>:SLOT #16 -----
<7>:SLOT #07 -----      <H>:SLOT #17 -----
<8>:SLOT #08 -----      <I>:SLOT #18 -----
<9>:SLOT #09 -----      <J>:SLOT #19 -----
<A>:SLOT #10 -----      <K>:SLOT #20 -----

<S> :System Status and Configuration
<T> :Giga Switch Status and Configuration
<U> :SNMP Status and Configuration

<ESC>:Logout

```

The inventory of all slots in the rack is shown. In this example, the chassis has a mix of iMux (5&8E1), a Eoe1 bridge card and a E1 DSU/CSU card. If no card is found in a slot, the slot status will display with 'dash marks'. The cards are number in slots #01~#20, left to right, looking from the front of the **FRM220A-CH20**, and can be selected with single keyin of 1~9 or A~K. Pressing the card number will immediately display card's status and configuration screen. For details of line card settings, please refer to **Appendix A** for the specific line card type. The other function keys are explained below.

S: the 'S' key enters the **System Status and Configuration** screen, where additional menus for the GSW/SNMP card's settings are configured.

T: the 'T' key will enter the **Giga Switch Status and Configuration** screen, where the sub menus for the L2 switch configuration can be found.

U: the 'U' key enters the SNMP Status and Configuration screen, where additional sub-menus are found to setup all the SNMP parameters.

[ESC]: this key will logout of the console mode.

2.2.3 TCP/IP Configuration

The Network Management modes that require TCP/IP communications must first have all TCP/IP configuration settings completed. This requires first logging into the FRM220-GSW/SNMP by Telnet or web, using the factory default IP address. Once the TCP/IP settings are completed, the **FRM220-GSW/SNMP** card can be accessed by Telnet, the Web or via standard SNMP protocol on the intended network.

Two Step Configuration

The management configuration process is broken down into two logical steps. First the Switch/SNMP agent (the **FRM220-GSW/SNMP** card itself) must be configured with an IP address, subnet mask and gateway IP. Second, the SNMP agent must be told who the network manager is, ie. the management workstation's IP address. Included in the second step are the community string settings and IP address to send the unsolicited trap messages (alarm messages).

To configure the card for use by SNMP, certain parameters must be set. They are:

- a. The SNMP card (agent) needs its own IP address.
- b. The SNMP card needs to know the IP address of the management workstation.
- c. The community string must be set.
- d. The SNMP card's subnet mask can be set.

Step One: Agent Configuration Process

Telnet into the GSW/SNMP, use the ID 'admin' with no password.

```

          CTC UNION TECHNOLOGIES CO., LTD.          FRM220A-GSW/SNMP          VER.[1.021]
=====
This Chassis ID:[00]          Cascaded:[No ]          Monitored Chassis ID:[00]

<1>:SLOT #01 -----          <B>:SLOT #11 -----
<2>:SLOT #02 FRM220A-5E1/ET100T          <C>:SLOT #12 -----
<3>:SLOT #03 FRM220A-8E1/ET100T          <D>:SLOT #13 -----
<4>:SLOT #04 FRM220A-8E1/ET100T          <E>:SLOT #14 -----
<5>:SLOT #05 -----          <F>:SLOT #15 -----
<6>:SLOT #06 -----          <G>:SLOT #16 -----
<7>:SLOT #07 -----          <H>:SLOT #17 -----
<8>:SLOT #08 -----          <I>:SLOT #18 -----
<9>:SLOT #09 -----          <J>:SLOT #19 -----
<A>:SLOT #10 -----          <K>:SLOT #20 -----

<S> :System Status and Configuration
<T> :Giga Switch Status and Configuration
<U> :SNMP Status and Configuration

<ESC>:Logout

```

From the main menu type 'S':

```

          CTC UNION TECHNOLOGIES CO., LTD.          FRM220A-GSW/SNMP          VER.[1.021]
=====
This Chassis ID:[00]          Cascaded:[No ]          Monitored Chassis ID:[00]
<< System Status and Configuration >>

<1> :System Information.
<2> :System Configuration.
<3> :System Monitor.
<4> :Alarm Status and Configuration.
<5> :Password Setup.
<6> :Reset Device.
<7> :Factory Defaults.
<8> :Upgrade Line Card.

<ESC>:Go to Previous Menu.

```

From the System Status and Configuration menu, type '2', System Configuration.

<< System Configuration >>

```
<1> :System Contact      []
<2> :System Name        []
<3> :System Location    []
<4> :DHCP Client        [Disable]
<5> :DHCP Renew         [192.168.1.1]
<6> :IP Address         [192.168.1.1]
<7> :Subnet Netmask     [255.255.255.0]
<8> :Default Gateway IP [192.168.1.254]
<9> :Apply IP Configuration.
<A> :TFTP Server IP     [192.168.1.2]
<B> :TFTP File Name     [Alone.dat]
<C> :Do TFTP and Update Software.
<T> :Date and Time.
```

These are the default TCP/IP settings.
You can directly connect by web browser if you have configured your Ethernet connected PC for this subnet.

<ESC>:Go to Previous Menu.

The first three items provide the MIB-2 with these contents. If the GSW/SNMP is to get IP address dynamically, then enable the DHCP Client. For static IP assignment, fill in items 6, 7, and 8. Edit items A & B to provide update for the GSW card. Item 9 is used to apply the settings made. Item C starts the update process.

- 1: Use this key to set the System Contact for the SNMP MIB-2.
- 2: Use this key to set the System Name for the SNMP MIB-2.
- 3: Use this key to set the System Location for the SNMP MIB-2.
- 4: Use this key to enable DHCP Client for dynamic TCP/IP
- 5: Use this key to set the
- 6: Use this key to set the IP address of the GSW.
- 7: Use this key to set the Subnet Mask of the GSW.
- 8: Use this key to set the default gateway address for the GSW.
- 9: This key will apply the IP settings to the GSW.
- A: Use this key to set the IP address of the TFTP server, used for upgrading.
- B: Use this key to set the update image filename to be transferred by TFTP.
- C: This key will initiate the TFTP image transfer and flash upgrade the File System.
- T: This key will bring up the network time setting menu.
- ESC: This key will write any changes and leave the system setting menu.

NOTE: If changing the IP address, subnet mask or default gateway, applying the settings, i.e., by selection <9> : Apply IP Configuration, will take place immediately. You will lose contact until revising the manager PC IP settings to match the new TCP/IP setup.

Step Two: Manager Configuration Process

a.) Assign Managers and Trap receivers From the main menu, press the 'U' key

```
This Chassis ID:[00]      Cascaded:[No ]      Monitored Chassis ID:[00]
<< SNMP Configuration >>
```

```
<1> :SNMP System
<2> :SNMP Communities
<3> :SNMP Users
<4> :SNMP Groups
<5> :SNMP Views
<6> :SNMP Accesses
```

Setup the SNMP System, press '1'

```
This Chassis ID:[00]      Cascaded:[No ]      Monitored Chassis ID:[00]
<< SNMP System Configuration >>
<1>Mode                  [Disabled]
<2>Version                [SNMP v1]
<3>Read Community        [public]
<4>Write Community       [private]
Engine ID                [800007e5017f000001]
```

```
<< SNMP Trap Configuration >>
<A>Trap Mode              [Disabled]
<B>Trap Version           [SNMP v1]
<C>Trap Community        [public]
<D>Trap Destination Address [0.0.0.0]
```

<S>Save All set

- 1: Enable SNMP by changing the mode to enabled.
- 2: Choose the SNMP version, V1, V2C or V3
3. Set the Read Only community string
4. Set the Read/Write community string

- A: Enable SNMP traps by changing the mode to enabled. (item 1, SNMP, must also be enabled)
- B: Set the SNMP version for trap messages.
- C: Configure the SNMP trap community string
- D: Set the destination or trap manager's IP address here.
- S: Save all settings for this menu.

Conclusion

The community strings act like passwords in dealing with the device via SNMP protocol. By changing the community strings for read / write ('private' in these examples) and read only (public) access, and assigning a community string to an access IP, an administrator can control access to the **FRM220A**. Community string names are case sensitive, therefore 'puBlic', 'Public' and 'public' are all different strings.

Now that both the 'System' and 'SNMP' settings are complete, the **FRM220A** is ready to be managed remotely over an IP network. The system provides a Telnet server feature that allows login over TCP/IP networks and provides a text based menu display.

The **FRM220A-GSW/SNMP** is supplied with an enterprise MIB file (Management Information Base) that can be compiled into any standard SNMP network management software. The MIB file complies with MIB-II and ANS.1 standards.

Later in Chapter 3, we will describe in detail the operation of the Web based management. This graphical management allows control of the gigabit Ethernet switch and the inserted cards in a convenient and popular WWW environment. When using web based management, the actual communications between the browser and the **GSW/SNMP** card is via standard HTTP protocol.

Please refer to **Appendix A** for detailed configuration of the **FRM220A** available converter cards.

2.2.4 Chassis Information and Alarm setup

The **FRM220A** supports two user configurable alarms for a number of different alarm conditions. Alarm conditions are configurable for alarms from Power, Fans, and UTP or Fiber link and Far End Fault states for local and remote converters.

From the System Status and Configuration menu of the FRM220A, press the '4' (four) key to enter the Alarm Status and Configuration.

```
CTC UNION TECHNOLOGIES CO., LTD.      FRM220A-GSW/SNMP      VER.[1.025]
=====
This Chassis ID:[00]      Cascaded:[No ]      Monitored Chassis ID:[00]
<< Alarm Status and Configuration >>

Alarm 1 Status      [Inactive]
Alarm 2 Status      [Inactive]

<1> :Alarm 1 Mode  [By Power]
<2> :Alarm 2 Mode  [By Fan]
<3> :User Define 1 Configuration.
<4> :User Define 2 Configuration.

<ESC>:Go to Previous Menu.
```

Description of Menu contents:

This Chassis ID: This ID number will reflect the actual ID number set on the selector switch on the rear of the chassis

Alarm 1 Status / Alarm 2 Status: Indicated whether there is currently an active alarm or if no alarm (inactive).

Power#1 and Power#2 Type: & Status

The **FRM220A** can accommodate two power supply modules of any type. There are three types available:

1. AC Model, supports 90~250VAC input, 200watt maximum output.
2. DC48 Model, supports 36-75VDC input, 200 watt maximum output
3. DC24 Model, supports 18~36VDC input, 200 watt maximum output

Fan#1 and Fan#2 RPM & Status

There are two hot swappable cooling fan assemblies that may be field replaced. The normal operational revolutions per minute (RPM) are between 2800 and 4900. The threshold for fan alarm is activated if the fan's RPM falls below 800RPM.

Alarm#1.

In the default configuration, Alarm #1 is Active if any failure condition exists for power. Alarm #2 is active if any fan fails or the RPM falls below the acceptable threshold (800RPM).

For an example of configuration for Alarm #1, press '1' (one).

Set Alarm 1 Mode.

```
<0> Disable      <1> By Power      <2> By Define 1      <3> By Define 2

<ESC>:Previous Menu.
```

0 : This will completely disable Alarm #1.

1 : This is the factory default setting. This alarm will only be off when two power modules are installed and powered on.

2 : This setting will take the user parameters and set the alarm according to failures in parameters set under items 1.

3 : This setting will take the user parameters and set the alarm according to failures in parameters set under items 2.

For an example of configuration for Alarm #2, press '2' (two).

Set Alarm 2 Mode.

<0> Disable <1> By Fan <2> By Define 1 <3> By Define 2

<ESC>:Previous Menu.

0 : This will completely disable Alarm #2.

1 : This is the factory default setting. This alarm will only be off when two fan modules are installed and working normally.

2 : This setting will take the user parameters and set the alarm according to failures in parameters set under items 1.

3 : This setting will take the user parameters and set the alarm according to failures in parameters set under items 2.

User Alarm Definitions

<< User Define 1 Configuration >>

Chassis:

<1> :[]Power 1 Status
<2> :[]Power 2 Status
<3> :[]Fan 1 Status
<4> :[]Fan 2 Status

Local:

<5> :[]UTP Link Status
<6> :[]FX Link Status
<7> :[]FEF Detected
<8> :[]Remote Power Status

Remote:

<9> :[]UTP Link Status
<A> :[]FX Link Status

<ESC>:Go to Previous Menu.

When alarm mode is set to "User", these definitions may be added to either User#1 or User#2. Any selected item that fails will cause alarm activation (and SNMP trap if SNMP is enabled). For chassis activated alarms, the user may select individual power or fan combinations. For locally generated alarms, any copper, fiber, Far End Fault or Remote Power Failure can be selected (or as supported), in any combination to generate an alarm on failure from installed cards. For any remotely connected in-band converters, any copper, fiber, or Far End Fault may be used to trigger the alarm relay (only for OAM managed converters).

Below is an example of user settings where Alarm#1 will be triggered if any local copper or fiber link, Far End Fault or remote power has failure. The system is designed to allow very flexible use of the two alarms through customized monitoring schemes.

<< User Define 1 Configuration >>

Chassis:

<1> :[]Power 1 Status
<2> :[]Power 2 Status
<3> :[]Fan 1 Status
<4> :[]Fan 2 Status

Local:

<5> :[*]UTP Link Status
<6> :[*]FX Link Status
<7> :[*]FEF Detected
<8> :[*]Remote Power Status

Remote:

<9> :[]UTP Link Status
<A> :[]FX Link Status

<ESC>:Go to Previous Menu.

2.2.5 User Password Setup

From the main menu page, press the 'S' key to enter the System Status and Configuration. Then select '5' (five) for Password Setup. Enter the old password, if there is one, and enter new password twice.

Input old password.

<ESC>:Discard and Return.

Old password:*****

Currently, the admin user has full control over all configuration and monitoring functions of the management system. In some future release, the management may be divided between different access levels and users will be assigned a level appropriate to their level of authority in the management scheme. For now, at least set a good password to protect Telnet and Web access of the GSW against unauthorized personnel.

2.2.6 Upgrading the GSW/SNMP

The **GSW/SNMP** and any cards, including any remotely connected (over fiber) in-band managed converters, are all capable of online software upgrade.

We recommend doing upgrade through the Web GUI. The image is then transferred via HTTP easily, so no TFTP server is required. Please refer to Chapter 3.

Note: When CTC Union releases an update, a 'package' will be generated that includes all required code, the TFTP server application, a detailed upgrade procedure in PDF format specifically for the release and a release notice listing the fixes or added features of the firmware. Latest packages may be found on our support Web site (<http://support.ctcu.com/>) and are available to registered members (registration is free).

This completes the basic chassis provisioning for the **FRM220A** 2U 20 slot Ethernet Platform Media Converter Rack through Telnet console. You will find provisioning and use of the web interface in the next chapter, Chapter 3. Specific configuration for line cards are located in the Appendix, starting with the first release line card, the FRM220A-nE1/ET100 Inverse Multiplexer.

Chapter 3 Web Based Management

3.1 Introduction

This chapter will explain the operation of the **FRM220A-GSW/SNMP** Web based interface used to monitor and configure the **FRM220A** fiber media converter rack.

The management station may be attached directly to the **FRM220A-GSW/SNMP** card with an Ethernet cable. Typically the workstation will be attached to a network's HUB or switch and the equipment to be managed may be connected to the same subnet or may be connected on a remote network that has access via a router to the local subnet.

Follow the procedures in Chapter 2 for configuring the **GSW** for TCP/IP communication on your network. Once this is completed and the Ethernet port of the **GSW** is connected to your network, the unit may be managed from any browser under any Operating System. The examples that follow are done with Mozilla Firefox 6 running on XP.

3.2 Web Based Management Operation

3.2.1 Introduction

This section assumes that the **Web Based** management using a workstation as in section 1 and that the SNMP agent has been correctly configured as in section 2. This chapter will detail the operation of the web GUI in monitoring and controlling the **FRM220** Platform Media Rack.

3.2.2 Web Login

3.2.2.1 Start the Web Based application

Start the application by opening a web browser application such as Firefox or Internet Explorer. Enter the address of the FRM220A in the format `http://xxx.xxx.xxx.xxx` where `xxx.xxx.xxx.xxx` is the IP address of the **GSW** card. A login username and password may or may not be required to enter the configuration. The default username and password are not set initially. In the example, we have already set a user as 'admin' through the console.

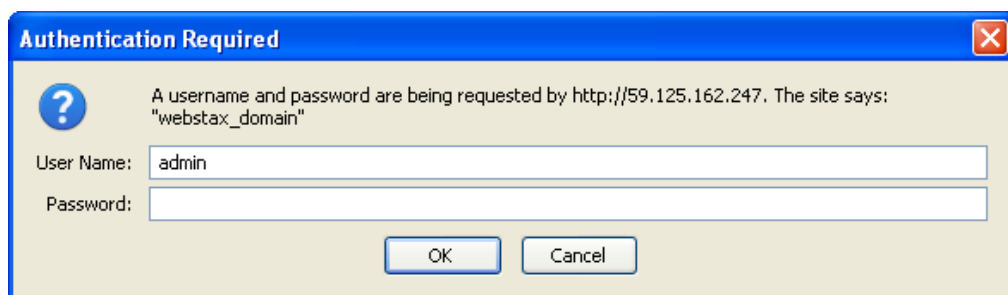


Figure 3.1 Web manager login

After a successful login, the home page for the rack will be displayed. All card inventory and LED status are shown in near real-time.

Note: CTC Union has an online demo unit placed on a public IP and answerable by DNS. We hope this demo will help our resellers to promote our product. End users may also find that evaluating our unit could lead to a decision to purchase our product. We trust everyone to behave and not corrupt our demo unit or place any graffiti.

`http://frm220a.ctcu.com.tw`

User ID is 'admin', no password is required.

3.2.2.2 Home Page

The **Web GUI** behaves just like any other web based application. The following graphic shows all of the areas that may be clicked for further configuration. Slots without any line card or without manageable line card will be shown as 'Empty'.

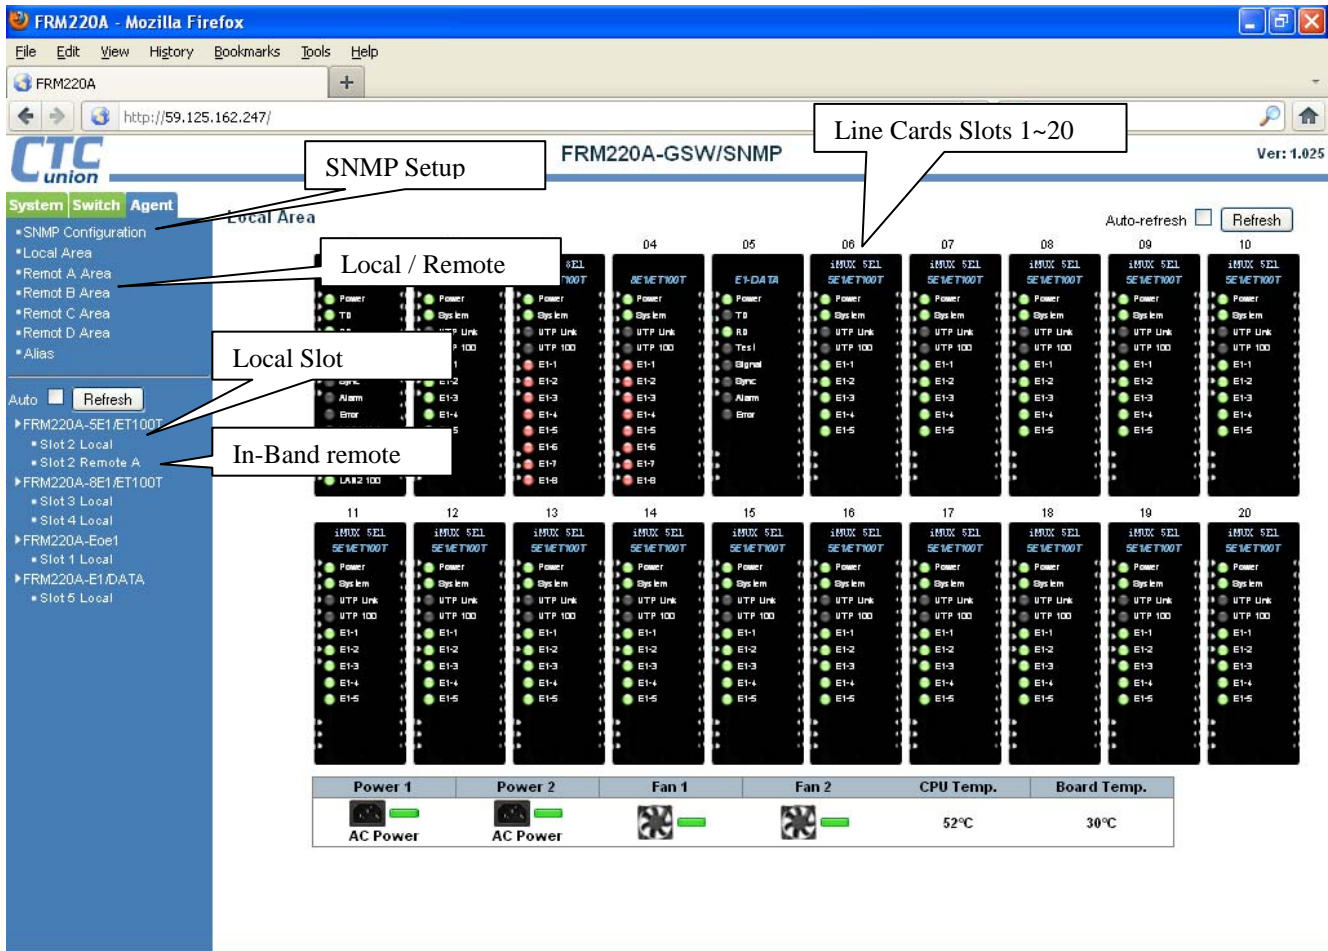


Figure 3.2 Selectable features of the Main Web GUI

3.2.3 Alias Configuration

The Alias panel configuration allows for up to 10 ASCII characters to describe each of the local twenty slots as well as remote in-band connected converters. The names are then displayed for each card on the home page graphic.

Panel Alias Configuration

Side:

Slot	Alias
1	
2	iMUX 5E1
3	iMUX 8E1
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	
18	
19	
20	

3.2.4 SNMP Configuration

SNMP System	SNMP Communities	SNMP Users	SNMP Groups	SNMP Views	SNMP Accesses
SNMP System Configuration					
Mode	Disabled				
Version	SNMP v1				
Read Community	public				
Write Community	private				
Engine ID	800007e5017f000001				
SNMP Trap Configuration					
Trap Mode	Disabled				
Trap Version	SNMP v1				
Trap Community	public				
Trap Destination Address	0.0.0.0				
Trap Inform Mode	Disabled				
Trap Inform Timeout (seconds)	1				
Trap Inform Retry Times	5				
<input type="button" value="Save"/> <input type="button" value="Reset"/>					

Clicking on the "SNMP Configuration" item will display an overview screen that allows setting the SNMP system information, including enabling the mode, selecting SNMP version, setting up trap management and configuring community strings.


3.2.5 Local/Remote Area

"Local Area" will display a graphic representation of all the cards inserted in the chassis and the real-time status of all LEDs (this display is also the default 'Home' page of the web interface).

Link states are shown with green LEDs. Flashing LEDs also indicate that there is traffic on the interface. Alarm LEDs are shown in RED. When any loop back test is being performed, the 'LB Test' LED will also be shown in RED.

When a 'Power' LED is not lit, it indicates that this converter has been disabled through software. You can click on any card and be taken directly to its management page. Please refer to **Appendix A** for all the detailed operation of the individual cards.


Local Area

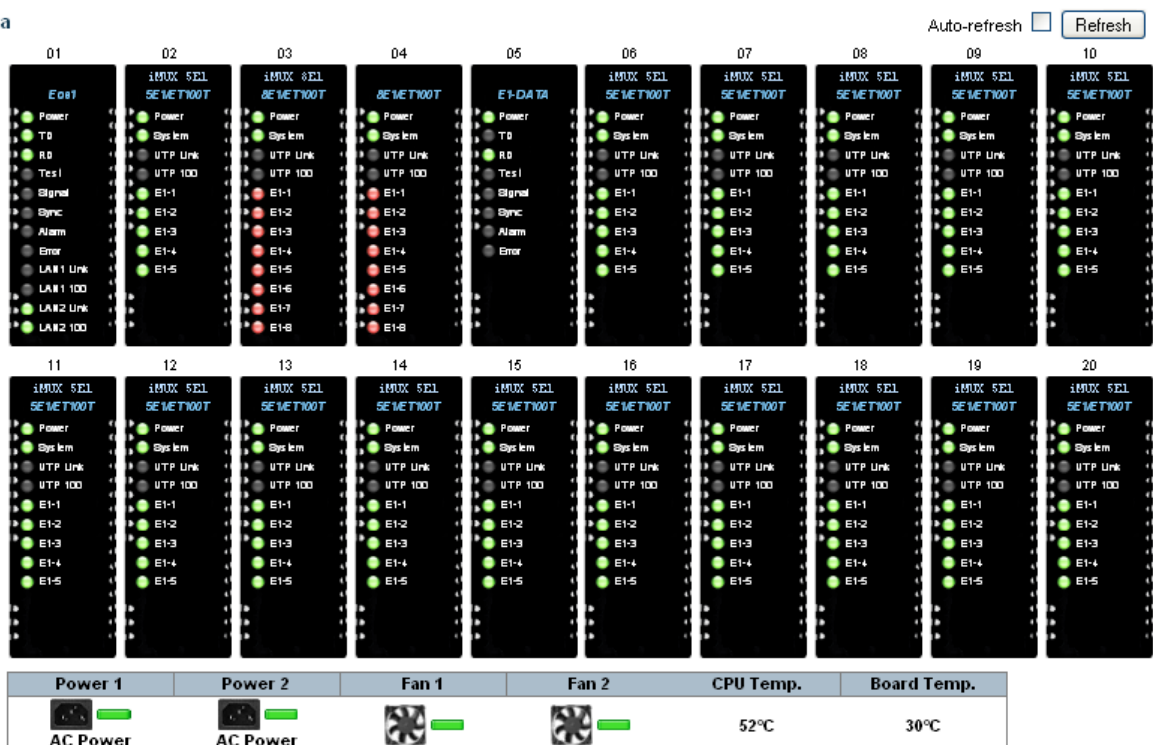

The graphic indicators at the bottom of the display show the real time status of the two Power Modules, the two chassis fans and temperature. An error in any of these will result in the effected icon's LED blinking in RED.

3.2.6 System

The system settings include informational as well as configuration setting. Each item will be explained below briefly.

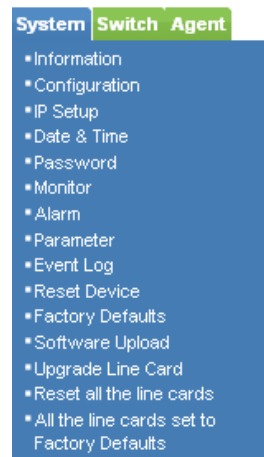

3.2.6.1 Information

Information about the system is displayed here, including the hardware version, the MAC address, firmware versions and software version information.

System Information

Hardware	
Hardware Version	1.000
MAC Address	00-02-ab-0d-6c-9e
Firmware	
EPLD Version	1.000
FPGA Version	0.000
Software	
Software Version	1.025
Software Date	2011-08-24 20:32:40 -0400

3.2.6.2 Configuration

System information includes the MIB-2 variables for contact, name and location of the system.

System Information Configuration

System Contact	techsupport@ctu.com
System Name	FRM220A-GSW
System Location	9F-Demo Lab

Save Reset

3.2.6.3 IP Setup

The IP Setup provides the web based method to change the IP address, subnet mask, default gateway and the VLAN ID.

IP Configuration

	Configured	Current
DHCP Client	<input type="checkbox"/>	<input type="button" value="Renew"/>
IP Address	59.125.162.247	59.125.162.247
Subnet Mask	255.255.255.240	255.255.255.240
Default Gateway	59.125.162.241	59.125.162.241
VLAN ID	1	1

Save Save and apply Reset Refresh

3.2.6.4 Date and Time

The Date & Time Setup provides the web based method to change the system time and configure SNTP time synchronization. The best method to set time is to first click the "Synchronize with PC" button. This will load your PC clock time into the GSW. Next, enter the Network Time Protocol (NTP) server's IP address, set the geographical time zone offset from GMT (UTC) and enable auto Synchronization. Click "Save" and the click "Synchronize with Server".

Time Configuration

Current Date and Time	2011-08-30 18:46:12 +08:00
System Uptime	0d 04:02:31
Adjust Date & Time	2011-08-30 18:46:12 <input type="button" value="Apply"/>
SNTP Server IP	168.95.195.12
Timezone Offset	GMT +08:00
Auto Synchronize Time	Enable

Save Synchronization with Server Synchronization with PC Reset Refresh

3.2.6.5 Password Setup

Enter the old password, if there is one, and enter new password twice. Click "Save".

System Password

Old Password	
New Password	
Confirm New Password	

3.2.6.6 Monitor

The Monitor screen will display system information for the type and status of Power 1 and Power 2, the fans status and RPM, the GSW CPU temperature and the GSW card board temperature (in Centigrade).

System Monitor

Power 1	
Type	AC90-250V
Status	OK
Power 2	
Type	AC90-250V
Status	OK
Fan 1	
RPM	4710
Status	OK
Fan 2	
RPM	4590
Status	OK
CPU	
Temperature	52°C
Board	
Temperature	30°C

3.2.6.7 Alarm Setup

The Alarm screen will display current alarm status. Inactive means there are currently no alarms. Active means an alarm condition exists. The Alarm configuration is default by powers and fans, but each Alarm supports "user" configuration. The "user" configuration is shown in the "User Define Configuration" section. There are definitions for Alarm 1 and for Alarm 2. Select the alarm conditions by checking the required check boxes. Hit "Refresh" to see if any new alarms exist. Hit "Save" to save the alarm settings. Hit "Reset" to return to the factory settings.

Alarm Status

Alarm 1	Alarm 2
Inactive	Inactive

Alarm Configuration

Alarm 1 Mode	By Power
Alarm 2 Mode	By Fan

User Define Configuration

Define 1	Chassis	<input type="checkbox"/> Power 1 Status	<input type="checkbox"/> Power 2 Status
	Local	<input type="checkbox"/> Fan 1 Status	<input type="checkbox"/> Fan 2 Status
		<input type="checkbox"/> UTP Link Status	<input type="checkbox"/> FX Link Status
Remote	<input type="checkbox"/> FEF Detection	<input type="checkbox"/> Remote Power Status	
	<input type="checkbox"/> UTP Link Status	<input type="checkbox"/> FX Link Status	
Define 2	Chassis	<input type="checkbox"/> Power 1 Status	<input type="checkbox"/> Power 2 Status
	Local	<input type="checkbox"/> Fan 1 Status	<input type="checkbox"/> Fan 2 Status
		<input type="checkbox"/> UTP Link Status	<input type="checkbox"/> FX Link Status
Remote	<input type="checkbox"/> FEF Detection	<input type="checkbox"/> Remote Power Status	
	<input type="checkbox"/> UTP Link Status	<input type="checkbox"/> FX Link Status	

3.2.6.8 Parameters

The GSW/SNMP has backup and restore functions that work at a card level (backup individual card or all cards to PC, or restore parameters from a backup file on PC to single card or all other like cards).

The 'Copy Parameters From The Line Card to Another' tab is used for internal management of parameters and provides the ability to quickly clone parameters from one card to another 'like' card in the same chassis.

Line Cards Parameters **Copy Parameters From The Line Card To Another**

Restore Parameters

Destination:

Save Parameters

Source:

3.2.6.9 Event Log

The event log keeps a running record of events that happen in the FRM220A-GSW/SNMP, including cards inserted/removed, card faults, power or fan faults, and remote login/logouts. The “Clear All” button will remove all log entries. The “Refresh” button will display any new events, if they have occurred. The “Save” button will export the event log in a plain text file with the “.log” file extension.

Log Information			
Item	Log No.	Time	Message
1	1	2011-01-01 06:41:26	Chassis 0, Slot 2, Local, Card FRM220A-5E1/ET100T Found
2	2	2011-01-01 06:41:27	Chassis 0, Slot 2, Remote A, Card FRM220A-5E1/ET100T Found
3	3	2011-01-01 06:41:28	Chassis 0, Slot 3, Local, Card FRM220A-8E1/ET100T Found
4	4	2011-01-01 06:41:29	Chassis 0, Slot 4, Local, Card FRM220A-8E1/ET100T Found
5	5	2011-01-01 06:41:30	admin login web from 61.31.21.146
6	6	2011-01-01 06:42:38	Admin login telnet from 61.31.21.146
7	7	2011-01-01 07:10:24	admin logout Telnet from 61.31.21.146
8	8	2011-01-01 07:12:07	Chassis 0, Slot 5, Local, Card FRM220A-E1/DATA Found
9	9	2011-01-01 07:12:15	Chassis 0, Slot 1, Local, Card FRM220A-Eoe1 Found
10	10	2011-01-01 07:16:59	Admin login telnet from 61.31.21.146
11	11	2011-01-01 08:31:06	admin logout Telnet from 61.31.21.146

1 Total:11

Clear All Refresh Save

3.2.6.10 Reset Device

The reset device function will do a warm reboot of the GSW CPU/Switch. To reset the switch, the “Yes” button must be clicked.

Warm Reset

Are you sure you want to perform a Warm Restart?

Yes No

3.2.6.11 Factory Defaults

The Factory Default function will return all configurations (except for the TCP/IP settings) to their factory defaults. To factory default the switch, the “Yes” button must be clicked.

Factory Defaults

Are you sure you want to reset the configuration to Factory Defaults?

Yes No

3.2.6.12 Software Upload

The Software Update function is the easy method to upgrade the operational software for the GSW/SNMP. First, click the “Browse” button and locate the software image file on your PC, then click the “Upload” button to transfer the image via HTTP. If the image is transferred successfully, the flash will be erased and then reprogrammed with the new update.

Software Update

Browse... Upload

Software update in progress

The uploaded Software image is being transferred to flash.
The system will reboot after the update.
Until then, do not reset or power off the device!



Flashing, please wait...

3.2.6.13 Upgrade Line Card

The Update Line Card function is the easy method to upgrade any of the line cards installed in the FRM220A CH20 chassis (except the 1000EAS/X). First, select the card type and slot number, then click the “Browse” button to locate the software image file on your PC, finally click the “Upload” button to transfer the image via HTTP. If the image is transferred successfully, the card will be reprogrammed with the new update.

Update Firmware of Line Card

Upgrade Settings	
Card Type	FRM220A-5E1/ET100T
Destination Slot	All Slots
Destination Side	Local

Browse... Upload

3.2.6.14 Reset All Line Cards

The reset all line cards function will do a warm reboot of all line cards installed and recognized in the 220A. To reset the cards, the “Yes” button must be clicked.

Reset

Are you sure you want to reset all the line cards?

Yes No

3.2.6.15 All Line Cards Set to Factory Default

The set all line cards to factory default function will return each installed card to its original factory default settings. To default the cards, the “Yes” button must be clicked.

Factory Defaults

Are you sure you want to reset all the lines cards configuration to Factory Defaults?

Yes No

3.2.7 Switch

The L2 switch functions are controlled under the Switch tab. There are three categories, Ports, Aggregation and VLAN.

System Switch Agent

- Ports
- Aggregation
- VLAN

3.2.7.1 Ports

States SFP Traffic Configuration

Auto-refresh ☐ Refresh

Port State Overview

The ‘Ports State Overview’ screen will display the link status for all ports of the L2 switch. The indicators 1~20 refer to the CH20 slots 1~20, as viewed from the front of the chassis, numbered from left to right.

Ports 21~24 are 10/100/1000 Base-T ports available at the rear of the CH20 chassis, located on the GSW/SNMP plug-in card. The additional ports 25~28 are SFP optical based and may be 1000Base-FX or 2500-FX. When using 2.5G optics, these four optical ports may be aggregated to 10G for any compatible 4x2500 switch.

Port status is indicated by color: Black means no link, Yellow is a link at 100M and Green is a link at 1G.

3.2.7.2 SFP

States SFP Traffic Configuration

Auto-refresh ☐ Refresh

SFP and D/D Information

Port 25		Port 26	
Vendor Name	CTC UNION	Vendor Name	CTC UNION
Vendor Part Number	SFS-7010-L31(I)	Vendor Part Number	SFS-7010-L31(I)
Fiber Type	Single	Fiber Type	Single
Tx Wave Length	1310 nm	Tx Wave Length	1310 nm
Rx Wave Length	1310 nm	Rx Wave Length	1310 nm
Link Length	10 km	Link Length	10 km

Port 27		Port 28	
Vendor Name	CTC UNION	Vendor Name	CTC UNION
Vendor Part Number	SFS-7010-L31(I)	Vendor Part Number	SFS-7010-L31(I)
Fiber Type	Single	Fiber Type	Single
Tx Wave Length	1310 nm	Tx Wave Length	1310 nm
Rx Wave Length	1310 nm	Rx Wave Length	1310 nm
Link Length	10 km	Link Length	10 km

The SFP tab will display the parts MSA information plus DDOM (Optical Monitor) for supported SFP modules.

3.2.7.3 Traffic

FRM220A-GSW/SNMP Ver: 1.025

Auto-refresh ☐ Refresh Clear

Port Statistics Overview

Port	Packets		Bytes		Errors		Drops		Filtered
	Receive	Transmit	Receive	Transmit	Receive	Transmit	Receive	Transmit	Receive
1	0	413	0	37569	0	0	0	0	0
2	322	643	87409	107204	0	0	0	0	0
3	0	412	0	37505	0	0	0	0	0
4	0	412	0	37505	0	0	0	0	0
5	0	0	0	0	0	0	0	0	0
6	17	1	6704	90	0	0	0	0	0
7	0	0	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0	0	0
9	0	0	0	0	0	0	0	0	0
10	0	0	0	0	0	0	0	0	0
11	0	0	0	0	0	0	0	0	0
12	0	0	0	0	0	0	0	0	0
13	0	0	0	0	0	0	0	0	0
14	0	0	0	0	0	0	0	0	0
15	0	0	0	0	0	0	0	0	0
16	0	0	0	0	0	0	0	0	0
17	0	0	0	0	0	0	0	0	0
18	0	0	0	0	0	0	0	0	0
19	0	0	0	0	0	0	0	0	0
20	0	0	0	0	0	0	0	0	0
21	0	0	0	0	0	0	0	0	0
22	0	0	0	0	0	0	0	0	0
23	945	478	163956	119548	0	0	0	0	0
24	0	0	0	0	0	0	0	0	0
25	0	0	0	0	0	0	0	0	0
26	0	0	0	0	0	0	0	0	0
27	0	30	0	1920	0	0	0	0	0
28	0	107	0	6850	0	0	0	0	0

The 'Traffic' tab will display the RMON traffic counters for each port. The counters show transmitted and received packet count, transmitted and received byte count as well as error packets, dropped packets and filtered packets for each port.

3.2.7.4 Port Configuration

FRM220A-GSW/SNMP Ver: 1.025

Refresh

Port Configuration

Port	Link	Speed		Flow Control			Maximum Frame	Excessive Collision Mode	Power Control
		Current	Configured	Current Rx	Current Tx	Configured			
1	100fdx	Auto	Auto	×	×	<input type="checkbox"/>	9600	Discard	Disabled
2	100fdx	Auto	Auto	×	×	<input type="checkbox"/>	9600	Discard	Disabled
3	100fdx	Auto	Auto	×	×	<input type="checkbox"/>	9600	Discard	Disabled
4	100fdx	Auto	Auto	×	×	<input type="checkbox"/>	9600	Discard	Disabled
5	Down	Disabled	Auto	×	×	<input type="checkbox"/>	9600	Discard	Disabled
6	Down	1Gbps FDX	Auto	×	×	<input type="checkbox"/>	9600	Discard	Disabled
7	Down	100Mbps FDX	Auto	×	×	<input type="checkbox"/>	9600	Discard	Disabled
8	Down	100Mbps HDX	Auto	×	×	<input type="checkbox"/>	9600	Discard	Disabled
9	Down	10Mbps FDX	Auto	×	×	<input type="checkbox"/>	9600	Discard	Disabled
10	Down	10Mbps HDX	Auto	×	×	<input type="checkbox"/>	9600	Discard	Disabled
11	Down	Auto	Auto	×	×	<input type="checkbox"/>	9600	Discard	Disabled
12	Down	Auto	Auto	×	×	<input type="checkbox"/>	9600	Discard	Disabled

The above screen has the port configuration settings for each card's uplink. The link state is displayed, the current link speed, the speed can be configure (disable port, enable auto negotiation, or force speed), there is an option to enable 802.3x flow control, and to adjust the maximum MTU (jumbo frames are supported). There are two options to deal with excessive collisions, the default is to discard packets, the option is to restart. The final parameter, "Power Control" is an EcoEthernet™ power saving function. ActiPHY™ is an automatic power savings mode when a specific port is in link down or standby operation. PerfectReach™ is an intelligent algorithm that actively determines the needed power level based on cable length.

3.2.8 Ports Aggregation

Aggregation Group Configuration

Group ID	Port Members																											
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
Normal	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

There are 8 (eight) aggregation groups that can be assigned any of the 28 available ports. A port can only be assigned to one group.

3.2.9 Ports VLAN

VLAN Membership Configuration

VLAN Membership Configuration

Delete	VLAN ID	Port Members																											
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28
<input type="checkbox"/>	1	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="button" value="Delete"/>	10	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
<input type="button" value="Delete"/>	30	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
<input type="button" value="Delete"/>	40	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

VLAN Port Configuration

VLAN Port Configuration

Port	Ingress Filtering	Frame Type	Port VLAN	
			Mode	ID
1	<input checked="" type="checkbox"/>	Tagged	Specific	10
2	<input type="checkbox"/>	All	Specific	1
3	<input type="checkbox"/>	All	Specific	1
4	<input type="checkbox"/>	All	Specific	1
5	<input type="checkbox"/>	All	Specific	1
6	<input type="checkbox"/>	All	Specific	1
7	<input type="checkbox"/>	All	Specific	1
8	<input type="checkbox"/>	All	Specific	1
9	<input type="checkbox"/>	All	Specific	1
10	<input type="checkbox"/>	All	Specific	1
11	<input type="checkbox"/>	All	Specific	1
12	<input type="checkbox"/>	All	Specific	1
13	<input type="checkbox"/>	All	Specific	1
14	<input type="checkbox"/>	All	Specific	1
15	<input type="checkbox"/>	All	Specific	1
16	<input type="checkbox"/>	All	Specific	1
17	<input type="checkbox"/>	All	Specific	1
18	<input type="checkbox"/>	All	Specific	1
19	<input type="checkbox"/>	All	Specific	1
20	<input type="checkbox"/>	All	Specific	1
21	<input type="checkbox"/>	All	Specific	1
22	<input type="checkbox"/>	All	Specific	1
23	<input type="checkbox"/>	All	Specific	1
24	<input type="checkbox"/>	All	Specific	1

This page left blank intentionally.


Chapter 4 Troubleshooting

4.1 Network Settings

4.1.1 Review TCP/IP Settings

During unit startup, the LED 'Matrix' will flash as the switch boots up, and then any slots with cards or any of the 4+4 SFP/Copper ports with an Ethernet link will light during normal operation. Refer to Chapter 2 section 2.2.5 TCP/IP Configuration for the SNMP agent settings. Be sure you have a valid IP address for the attached network, that the subnet mask is properly set and that the default gateway is set if you wish to manage the GSW from a remote network.

Attach a network cable to any one of 4 (four) rear panel LAN (10/100/1000) connectors using a straight cable if connecting to a HUB or to another MDI device, such as direct connection to a workstation. The Link LED should be on or flashing. No link LED means no link. From any PC on the network, confirm the switch can be pinged.

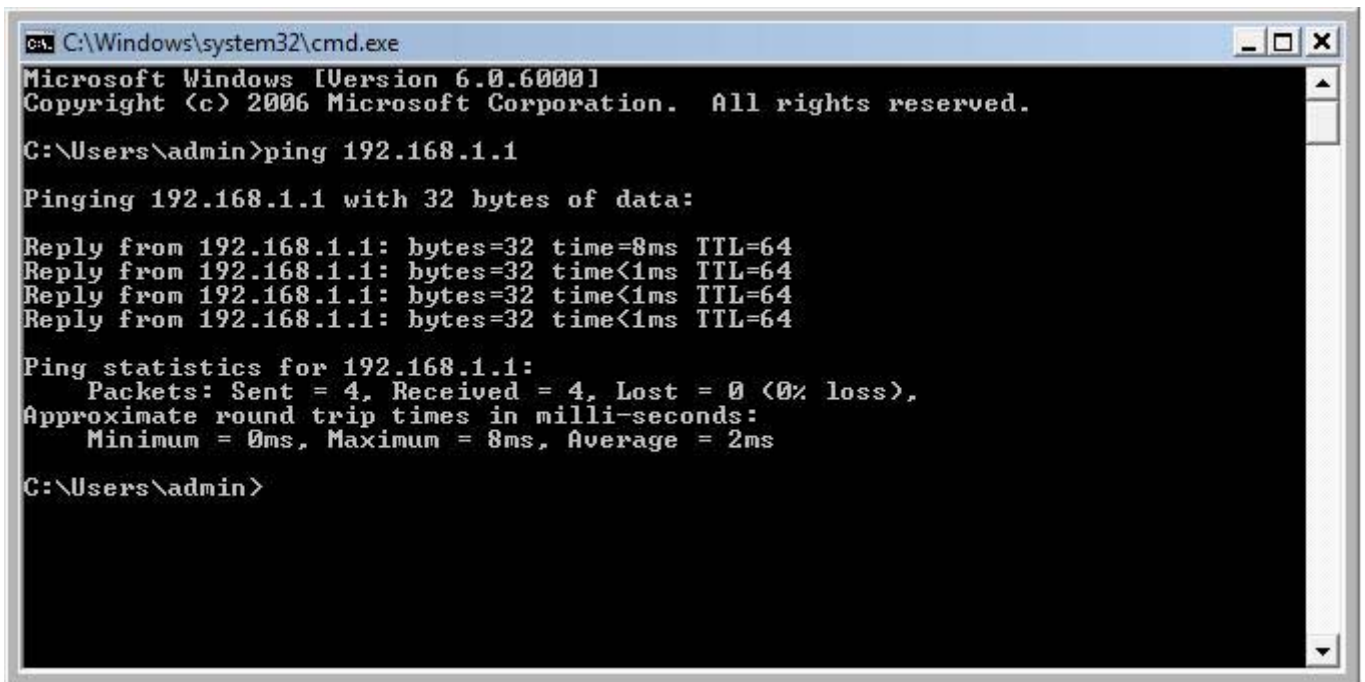

```
C:\Windows\system32\cmd.exe
Microsoft Windows [Version 6.0.6000]
Copyright (c) 2006 Microsoft Corporation. All rights reserved.

C:\Users\admin>ping 192.168.1.1

Pinging 192.168.1.1 with 32 bytes of data:

Reply from 192.168.1.1: bytes=32 time=8ms TTL=64
Reply from 192.168.1.1: bytes=32 time<1ms TTL=64
Reply from 192.168.1.1: bytes=32 time<1ms TTL=64
Reply from 192.168.1.1: bytes=32 time<1ms TTL=64

Ping statistics for 192.168.1.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 8ms, Average = 2ms

C:\Users\admin>
```


Figure 4.1 Ping

The "ipconfig" command from a command window in NT will display the workstation's IP, subnet and gateway settings. The "ping" command will send an ICMP protocol message to the GSW SNMP agent, which in turn should reply. If no reply, double check all network connects, connect directly from a workstation to the GSW, or as a last resort replace the GSW card of the FRM220A.

4.1.2 Review Manager Settings

For SNMP management software to connect to the GSW for management, the GSW/SNMP must be properly configured with the manager's IP address and authorized for read/write (via community string setting) and trap messages. Review the settings explained in 2.2.5 TCP/IP Configuration.

If the management workstation is on a remote network, ensure it can also pass the ping test.

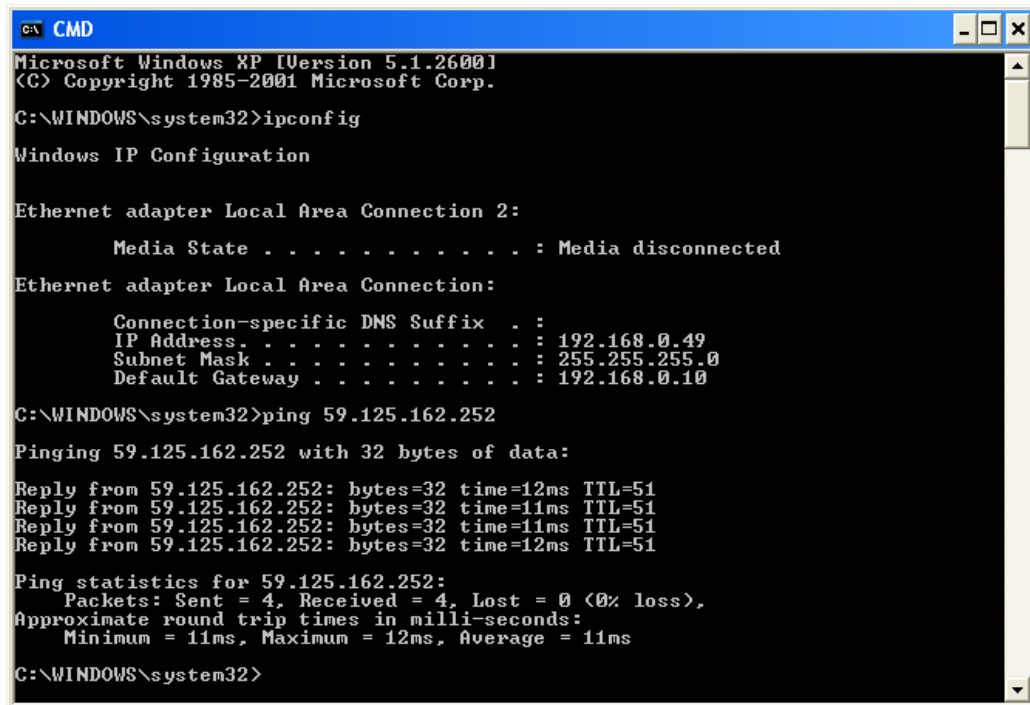

```
C:\ CMD
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\WINDOWS\system32>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection 2:

    Media State . . . . . : Media disconnected

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : 
    IP Address. . . . . : 192.168.0.49
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.0.10

C:\WINDOWS\system32>ping 59.125.162.252

Pinging 59.125.162.252 with 32 bytes of data:

Reply from 59.125.162.252: bytes=32 time=12ms TTL=51
Reply from 59.125.162.252: bytes=32 time=11ms TTL=51
Reply from 59.125.162.252: bytes=32 time=11ms TTL=51
Reply from 59.125.162.252: bytes=32 time=12ms TTL=51

Ping statistics for 59.125.162.252:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 11ms, Maximum = 12ms, Average = 11ms

C:\WINDOWS\system32>
```

Figure 4.2 Ipconfig and Ping Remote Network Device

Check with your network administrator to ensure that any firewalls in place will allow passing of SNMP protocol in order to connect with an FRM on a remote network. By default SNMP uses port 161. Traps are unsolicited UDP messages that are sent out port 162.

Always check all connections and double check all configurations. We have tested the FRM220A extensively on local networks, on remote networks through bridges and routers and even over wireless links. You should not experience any problems if you follow each and every step in this guide. We hope you enjoy using the FRM220A with GSW/SNMP and web based GUI manager.

Trouble with NAT

Because SNMP uses UDP, NAT between networks will not allow forwarding packets unless specific port forwarding rules are written into the firewall. If the GSW is on a public network and the manager workstation is behind a NAT firewall, then there is no way for traps to reach the manager (the firewall will block them). The alternative is to setup port forwarding on the network's firewall so that the traps on UDP port 162 are redirected to the internal SNMP management workstation.

Appendix A. FRM220A Cards Options

A.0 Introduction

The **FRM220A** In-Band Managed Media Converter Chassis is designed to accept a variety of optical to electrical or optical to optical converter cards. As cards are added, this section will be updated with the relevant information for the new cards. The management interface and all cards support software upgrading so that new cards and new features may be added at any future date. Please refer to Chapters 2&3 for details on the upgrade method and procedures for operating the **FRM220A GSW/SNMP**.

A.1 FRM220A-iMUX In-band Managed Inverse Multiplexer

The FRM220A-nE1/ET100 are 5, 8 or 16 E1 port inverse multiplexer cards with built-in Bridge for the FRM220/220A Series Platform Media Converter Rack. The multiplexers support bundling Unframed E1s using GFP-F (Generic Framing Procedure-Framed). The clock source may be selected internally or recovered from any one of the received E1 signals. The Ethernet port utilizes a single RJ-45 connector or SFP for optical fiber, depending on model. One single model supports either unbalanced 75 ohm or balanced 120 ohm (adapter cables required). When the FRM220A-nE1/ET100 card is placed in the FRM220A rack with GSW/SNMP management, the management can view the converter card's status, type, version, Ethernet link status and alarms. The card can be configured to enable or disable the port, reset the card, set clocking, Ethernet mode and provide E1 analog diagnostic loopbacks. A unique feature of the FRM220A-nE1/ET100 is the use of a common card design which may either be inserted in an appropriate single or dual slot chassis as a stand-alone modem or as a card when placed in the FRM220A-CH20 In-band managed rack.

Features

- Standalone type Ethernet to 5, 8, or 16 port E1 converter.
- Uplinks 100M Ethernet to aggregate trunk card of FRM220A
- Interface connectors, RJ-48C for 120Ω , BNCx2 for 75Ω per channel.
- E1s are bundled according to standard GFP-F
- LCAS (Link Capacity Adjustment Scheme) supports dynamic bandwidth of virtual concatenated containers.
- E1 settings.
 - E1 loopback (per channel)
 - 75 or 120 ohm impedance
- Timing source setting (Any receive E1 recovery or internal oscillator).
- Embedded Operations Channel (EOC) for remote in-band management.
- Integrated BERT function
- RMON counter for LAN Tx/Rx byte count.
- VLAN tag support
- Bandwidth control (32K to 100M)
- LED indicators



Specifications

- **G.703 Interface**
 - **Connector** HDB26 Female with adapters for 75 or 120 Ohm
 - **Data rate** 2048kb/s
 - **Impedance** 75 ohm for unbalanced, 120 ohm for balanced
 - **Framing** Requires Unframed, transparent clear channel E1s
 - **RxSensitivity** -43dB (extra Long Haul)
 - **TxPulseAmp.** 3.00V p-p (120 ohm); 2.73V p-p (75 ohm)
 - **Line code** HDB3
- **Indications** LED (PWR, Alarm, Individual E1 status, Link, SD)
- **Ethernet Port** 1 x RJ-45, Auto-Negotiation, Auto-MDIX (T-model)
1 x caged SFP (100Base-FX) (S-model)
- **VLAN** IEEE802.1Q tagged VLAN support
- **Maximum MTU** 1916 bytes
- **Ingress/Egress** Bandwidth control (32K to 100M, nx32K granularity)
- **GFP-F** per ITU-T G.7041
- **LCAS** Enabled or disabled
- **Power** (Card supports hot-swapping)
- **Input** Card : 12VDC, Standalone : AC, DC options
- **Consumption** <6W
- **Dimensions** 155 x 88 x 23mm (D x W x H)
- **Weight** 120g
- **Temperature** 0 ~ 50°C (Operating), -10 ~ 70°C (Storage)
- **Humidity** 10 ~ 90% non-condensing
- **Certification** CE, FCC, LVD, RoHS
- **MTBF** 65000 hrs (25°C)
- **Test Loops** (set from console)
 - **E1** Remote and Request Remote Loop back
 - **BERT** Integral 511 pattern generator (set from console)



This product includes the following models:

FRM220A-5, 8, 16E1-ET100T (5E1, 8E1 or 16E1 with RJ-45 LAN)

FRM220A-5, 8, 16E1-ET100S (5E1, 8E1 or 16E1 with SFP LAN)

A.1.1 Web Management

The “**E1 Port**” tab is mostly informational. For each of the E1 lines we can observe if there is normal signal, sync, AIS alarm, RAI, Loss of Multi-Frame and whether the port is active or not.

Loop back for any of the E1 circuits can also be enabled here. The loop back can be used in conjunction with the integral BERT to confirm link integrity.

Chassis	Slot	Side	Type	Version
00	02	Local	FRM220A-5E1/ET100T	1.200-1.057-1.000-1.000

E1 Port	LAN Port	Device	BERT	RMON
---------	----------	--------	------	------

E1 Port Status and Configuration

Channel	Signal	Sync	AIS	Connector	RAI	LOMF Type	Active
1	Normal	Sync	No	RJ-48C	No	No	Active
2	Normal	Sync	No	RJ-48C	No	No	Active
3	Normal	Sync	No	RJ-48C	No	No	Active
4	Normal	Sync	No	RJ-48C	No	No	Active
5	Normal	Sync	No	RJ-48C	No	No	Active

Channel Defect	1E-6
Channel Loop Detection	Enable

Channel	Loop Back	Loop Check State	Defect Status
1	OFF	No	No
2	OFF	No	No
3	OFF	No	No
4	OFF	No	No
5	OFF	No	No

Save Cancel Refresh

The “LAN port” supports auto-negotiation or forced mode setting. If force mode setting the card, be sure to properly configure the GSW port for the same forced mode. Additionally, the LAN port supports enabling flow control, bandwidth control and can be made VLAN tag aware.

Chassis	Slot	Side	Type	Version
00	02	Local	FRM220A-5E1/ET100T	1.200-1.057-1.000-1.000
E1 Port	LAN Port	Device	BERT	RMON

LAN Port Status and Configuration

Link	Status	Flow Control	Speed Limited
Down	None	Enable	Disabled

Port Mode	Auto
Flow Control	Enable
Speed Limit (32K'n) n =	0 (1~3125, 0 to Disable)
VLAN Aware	Disable
VLAN ID	1 (1~4094)

Save Cancel Refresh

The “Device” tab has the major configuration options for the iMUX. It is most important that the E1 clocking be configured properly. If this is a purely point-to-point application, we need one iMUX with internal clock and the remote to follow. If the E1 travels over say an SDH network, then the clock will come from the network and both iMUX ends should recover E1 clock.

TVIf the VCAT configuration does not have all E1 checked, only those checked will be part of the VCAT group. So, for example if you wanted to connect to a third party mux that only had 4 E1 members, we could turn off our 5th E1 here.

The SNMP Sa bits are required to support in-band management. By default they must all be checked ON. If any are checked off and saved, communication to the remotely connected iMUX could be lost.

Chassis	Slot	Side	Type	Version
00	02	Local	FRM220A-5E1/ET100T	1.200-1.057-1.000-1.000
E1 Port	LAN Port	Device	BERT	RMON

System Status

System state	Remote Device	Remote Power
Normal	Link Up	Normal

Device Configuration

Device Active	Enable
Timing Source	Recovery from E1-1
FCS of GFP	Disable
Auto Channel Adjust	Enable
Payload Scramble	Enable
FailOver	Disable

VCG State

LOM	SOM	CRC	LOA	LFD	DDTO
No	No	No	No	No	No

VCAT Configuration

VCAT Member	<input checked="" type="checkbox"/> 1	<input checked="" type="checkbox"/> 2	<input checked="" type="checkbox"/> 3	<input checked="" type="checkbox"/> 4	<input checked="" type="checkbox"/> 5
-------------	---------------------------------------	---------------------------------------	---------------------------------------	---------------------------------------	---------------------------------------

SNMP Channel Configuration

SNMP Channel BIT	<input checked="" type="checkbox"/> Sa4	<input checked="" type="checkbox"/> Sa5	<input checked="" type="checkbox"/> Sa6	<input checked="" type="checkbox"/> Sa7
------------------	---	---	---	---

Save Cancel Device Reset Set to Defaults Refresh

The iMUX has an integral “**BERT**” function to performance test any one of the E1 lines, one at a time. Enable the function, select the E1 line and click “Save”.

Chassis	Slot	Side	Type	Version
00	02	Local	FRM220A-5E1/ET100T	1.200-1.057-1.000-1.000

E1 Port	LAN Port	Device	BERT	RMON
---------	----------	--------	-------------	------

BERT Status and Configuration

Errored Seconds (ES)	Error Free Seconds (EFS)	Severely Errored Second (SES)
0	0	0

BERT Function	Disable ▼
E1 Channel	E1-1 ▼

The BERT function also requires that the remote unit have its E1 placed in loop back. So, go to the remote unit and place the E1 (E1-5 in this example) into RLB. Return to the local unit’s BERT tab and view the BERT results by clicking “Refresh”.

BERT Status and Configuration

Errored Seconds (ES)	Error Free Seconds (EFS)	Severely Errored Second (SES)
0	35	0

BERT Function	Enable ▼
E1 Channel	E1-5 ▼

The “**RMON**” tab is where the RMON counter function can be enabled (it is disabled by default) and where the IN/OUT RMON counters can be displayed.

Chassis	Slot	Side	Type	Version
00	02	Remote A	FRM220A-5E1/ET100T	1.200-1.057-1.000-1.000

E1 Port	LAN Port	Device	BERT	RMON
---------	----------	--------	------	-------------

RMON Status and Configuration

RMON In	RMON Out
1,500	934

RMON Function	Enable ▼
----------------------	----------

A.2 FRM220A-E1/Data DSU/CSU Converter Card

The FRM220A-E1/Data is a single port G.703/704 Fractional E1 DSU/CSU card for the FRM220/220A Series Platform Media Converter Rack. The converter supports Unframed, PCM31, PCM31+CRC4, PCM30, and PCM30+CRC4 framing modes. The clock source may be selected internally, recovered from received E1 signal, externally from the Data port or transparent. The Data port interface utilizes a single Hi-Density 26pin connector. Cable solutions are provided for RS-530/449, X.21, V.35 and RS-232. The unit can recognize the cable type attached and automatically self-configure the interface circuits. Choosing from one of two model types, the E1 connection is either unbalanced 75 ohm with two BNC connectors or balanced 120 ohm with one RJ-45 connector. When the E1/Data card is placed in the FRM220/220A rack with SNMP management, the management can view the converter card's status, type, version, E1 link status and alarms. The card can be configured to enable or disable the card, reset the card, set clocking, frame mode, interface type and provide analog or digital diagnostic loopbacks. A unique feature of the E1/Data is the use of a common card design which may either be inserted in the FRM220-CH01 single slot chassis as a stand-alone modem or as a card when placed in the FRM220/220A-CH20 In-band managed rack.

Features

- Standalone type, 1 port E1 to Synchronous Data converter.
- Interface connectors, RJ-48C for E1/Data-R, BNCx2 for E1/Data-B.
- E1 settings.
- Line Code HDB3 or AMI.
- Full or Fractional.
- Frame setting, E1(CCS/CAS).
- CRC enable/disable.
- Idle code setting (0x7E or 0xFF).
- Auto generate (AIS) enable, disable setting.
- Timing source setting (Receive E1 recovery, Internal oscillator, External from Synchronous Data port or transparent).
- Active timeslot number setting (E1 CCS 1-31 or E1 CAS 1-30).
- Base timeslot setting (E1 CCS 1-31, E1 CAS 1-15 or 17-31.)
- Loop Back with integral BERT
- LED indicators



Specifications

G.703 Interface

Connector	1xRJ-45 or 2xBNC (depending on model)
Data rate	2048kb/s
Impedance	75 ohm for unbalanced, 120 ohm for balanced
Framing	CCS, CAS, w or w/o CRC4, Unframed
RxSensitivity	-43dB (extra Long Haul)
TxPulseAmp.	3.00V p-p (120 ohm); 2.73V p-p (75 ohm)
Line code	HDB3 or AMI selectable

Indications LED (PWR, TD/RD act., Test, Signal loss, Sync loss, Alarm, Error)

Data Port HD26 w/cable for V.35, RS530, RS449, X.21 or RS232 (software selectable); DCE type (Card supports hot-swapping)

Power Input Card : 12VDC, Standalone : AC, DC options
Consumption <6W

Dimensions 155 x 88 x 23mm (D x W x H)

Weight 120g

Temperature 0 ~ 50°C (Operating), -10 ~ 70°C (Storage)

Humidity 10 ~ 90% non-condensing

Certification CE, FCC, LVD, RoHS

MTBF 65000 hrs (25°C)

Test Loops (set from console)

E1 Local, Remote and Request Remote Loop back

Data Local, Remote and Request Remote Loop back

BERT Integral 511 pattern generator (set from console)



This product includes the following models:

FRM220A-E1/Data-R E1 DSU/CSU Converter Card with RJ-45

FRM220A-E1/Data-B E1 DSU/CSU Converter Card with BNC

A.2.1 Web Management

The “E1 Port” tab displays status and information and also sets up the framing and timeslot assignment. The frame mode can be framed or unframed (clear channel). Framed mode supports either CCS (PCM31) or CAS (PCM30) framing. Line code has support for either HDB3 or AMI. The pass thru timeslot data can be filled with either 0x7E (standard idle code) or 0xFF. Remember to click “Save” after making changes.

Chassis	Slot	Side	Type	Version
00	05	Local	FRM220A-E1/DATA	1.000-2.010-1.010-0.000

E1 Port
Data Port
Device

E1 Port Status and Configuration

Signal	Sync	LOMF	Rx AIS	Bert Error	Alarm	Connector Type	Line Code Violation	Remote PWR
Normal	Sync	No	No	No	No	BNC	No	Normal

Frame Mode
Frame Format
Line Code
Receive Loss Transmit AIS
Unused timeslot code

Framed
CCS
HDB3
Disable
0x7E

Time Slot Configuration

Time Slot	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	

Save
Cancel
Refresh

The “Data Port” tab provides the information and settings for the serial data port. When set to “Auto”, the device will identify the cable attached to the port automatically. In the example below, an RS-530 cable is used. This converter supports software setting of DCE or DTE mode. Typically a modem such as this is DCE (TD is an input). When set to DTE, no crossover cable is required (TD becomes an output). The RC, TC and ETC clock signals all support inverting polarity to correct for some errors caused by different cable lengths. The handshaking can be set to follow or forced constantly on. The data port supports a software enabled Loop Back function. If this port will be used to oversample asynchronous data, there is a setting to allow error free use in this application.

Chassis	Slot	Side	Type	Version
00	05	Local	FRM220A-E1/DATA	1.000-2.010-1.010-0.000

E1 Port
Data Port
Device

Data Port Status and Configuration

RD	TD	RTS	CTS	DCD	Cable Status	DSR	DTR	LLB	Rate
Space	Space	ON	ON	ON	Auto RS-530 DCE	Space	Space	Mark	1984

Port Active
Data Port Type
DCE/DTE Mode
RC Polarity
TC Polarity
ETC Polarity
CTS/RTS Output
DSR/DTR Output
Data Port LLB
Data Port Synchronous

On line
Auto
DCE
Normal
Normal
Normal
Follows CTS/RTS
Follows DSR/DTR
Disable
Synchronous

Save
Cancel
Refresh

Under the “Device” tab we can set the timing as recovery from E1 receive, from data port clock receive (such as when in DTE mode), clock from an internal oscillator (master clock) or a transparent clocking mode. There also is located here loop back and integral BER testing.

Chassis	Slot	Side	Type	Version
00	05	Local	FRM220A-E1/DATA	1.000-2.010-1.010-0.000

E1 Port
Data Port
Device

Device Configuration

Device Active	Enable
E1 Timing Source	Internal oscillator
Loopback Select	E1 Side
Loopback Test	Off
E1 BERT Test	Disable
E1 BERT Error	No error

Save
Cancel
Device Reset
Set to Defaults
Refresh

When the **E1/DATA** is ordered with a V.35 interface, the unit comes with a HDB26 male to MB34 Female adapter cable, 1 meter long. The pin assignment follows the table below.

Abbreviation	HDB26 PIN#		MB34 PIN#	V.35 Circuit
FG	1	↔	A	Frame
SG	7	↔	B	Signal Ground
TD(A)	2	↔	P	TD(A)
TD(B)	11	↔	S	TD(B)
RD(A)	3	↔	R	RD(A)
RD(B)	21	↔	T	RD(B)
RTS(A)	4	↔	C	RTS
CTS(A)	5	↔	D	CTS
DSR(A)	6	↔	E	DSR
DTR(A)	20	↔	H	DTR
DCD(A)	8	↔	F	DCD
ETC(A)	24	↔	U	ETC(A)
ETC(B)	16	↔	W	ETC(B)
TC(A)	15	↔	Y	TC(A)
TC(B)	23	↔	AA	TC(B)
RC(A)	17	↔	V	RC(A)
RC(B)	25	↔	X	RC(B)
RLB	9	↔	HH	RL
LLB	18	↔	JJ	LL
TM	10	↔	KK	TM

Table 2-3 DATA V.35 cable

When the **E1/DATA** is ordered with a RS-530 interface, the unit comes with a HDB26 male to DB25 Female adapter cable, 1 meter long. The pin assignment follows the table below.

Abbreviation	HDB26 PIN#		DB25 PIN#	RS-530 Circuit
FG	1	↔	1	Frame
SG	7	↔	7	AB
TD(A)	2	↔	2	BA(A)
TD(B)	11	↔	14	BA(B)
RD(A)	3	↔	3	BB(A)
RD(B)	21	↔	16	BB(B)
RTS(A)	4	↔	4	CA(A)
RTS(B)	13	↔	19	CA(B)
CTS(A)	5	↔	5	CB(A)
CTS(B)	14	↔	13	CB(B)
DSR(A)	6	↔	6	CC(A)
DSR(B)	22	↔	22	CC(B)
DTR(A)	20	↔	20	CD(A)
DTR(B)	12	↔	23	CD(B)
DCD(A)	8	↔	8	CF(A)
DCD(B)	26	↔	10	CF(B)
ETC(A)	24	↔	24	DA(A)
ETC(B)	16	↔	11	DA(B)
TC(A)	15	↔	15	DB(A)
TC(B)	23	↔	12	DB(B)
RC(A)	17	↔	17	DD(A)
RC(B)	25	↔	9	DD(B)
RLB	9	↔	21	RL
LLB	18	↔	18	LL
TM	10	↔	25	TM

Table 2-4 DATA RS-530 cable

When the **E1/DATA** is ordered with a RS-449 interface, the unit comes with a HDB26 male to DB37 Female adapter cable, 1 meter long. The pin assignment follows the table below.

Abbreviation	HDB26 PIN#		DB37 PIN#	RS-449 Circuit
FG	1	↔	1	Frame
SG	7	↔	19,20,37	SG,RC,SC
TD(A)	2	↔	4	SD(A)
TD(B)	11	↔	22	SD(B)
RD(A)	3	↔	6	RD(A)
RD(B)	21	↔	24	RD(B)
RTS(A)	4	↔	7	RS(A)
RTS(B)	13	↔	25	RS(B)
CTS(A)	5	↔	9	CS(A)
CTS(B)	14	↔	27	CS(B)
DSR(A)	6	↔	11	DM(A)
DSR(B)	22	↔	29	DM(B)
DTR(A)	20	↔	12	TR(A)
DTR(B)	12	↔	30	TR(B)
DCD(A)	8	↔	13	RR(A)
DCD(B)	26	↔	31	RR(B)
ETC(A)	24	↔	17	TT(A)
ETC(B)	16	↔	35	TT(B)
TC(A)	15	↔	5	ST(A)
TC(B)	23	↔	23	ST(B)
RC(A)	17	↔	8	RT(A)
RC(B)	25	↔	26	RT(B)
RLB	9	↔	14	RL
LLB	18	↔	10	LL
TM	10	↔	18	TM

Table 2-5 DATA RS-449 cable

When the **E1/DATA** is ordered with a X.21 interface, the unit comes with a HDB26 male to DB15 Female adapter cable, 1 meter long. The pin assignment follows the table below.

Abbreviation	HDB26 PIN#		DB15 PIN#	X.21 Circuit
FG	1	↔	1	Shield
SG	7	↔	8	Ground
TD(A)	2	↔	2	Transmit(A)
TD(B)	11	↔	9	Transmit(B)
RD(A)	3	↔	4	Receive(A)
RD(B)	21	↔	11	Receive(B)
RTS(A)	4	↔	3	Control(A)
RTS(B)	13		10	Control(B)
DCD(A)	8	↔	5	Indication(A)
DCD(B)	26		12	Indication(B)
ETC(A)	24	↔	7	Ext. Timing(A)
ETC(B)	16	↔	14	Ext. Timing(B)
RC(A)	17	↔	6	Signal Timing(A)
RC(B)	25	↔	13	Signal Timing(B)

Table 2-6 DATA X.21 cable

When the **E1/DATA** is ordered with a RS-232 interface, the unit comes with a HDB26 male to DB25 Female adapter cable, 1 meter long. The pin assignment follows the table below.

Abbreviation	HDB26 PIN#		DB25 PIN#	RS-232 Circuit
FG	1	↔	1	Frame
SG	7	↔	7	SG
TD	2	←	2	TD
RD	3	→	3	RD
RTS	4			RTS
CTS	5		5	CTS
DSR	6		6	DSR
DTR	20	↔	20	DTR
DCD	8		8	DCD
ETC	24		24	ETC
TC	15		15	TC
RC	17		17	RC

Table 2-7 DATA RS-232 cable

A.3 FRM220A-Eoe1 Ethernet over E1 Converter

The FRM220A-Eoe1 is a single port G.703/704 Fractional E1 DSU/CSU card with built-in HDLC Bridge for the FRM220/220A Series Platform Media Converter Rack. The converter supports Unframed, PCM31, and PCM30 framing modes. The clock source may be selected internally or recovered from received E1 signal. The Ethernet port utilizes a single RJ-45 connector. One single model supports either unbalanced 75 ohm with two BNC connectors or balanced 120 ohm with one RJ-45 connector. When the FRM220A-Eoe1 card is placed in the FRM220 rack with SNMP management, the management can view the converter card's status, type, version, Ethernet link status and alarms. The card can be configured to enable or disable the port, reset the card, set clocking, frame mode and provide analog diagnostic loopbacks. A unique feature of the FRM220A-Eoe1 is the use of a common card design which may either be inserted in the FRM220-CH01M single slot chassis as a stand-alone modem or as a card when placed in the FRM220-CH20 In-band managed rack.

Features

- Standalone type, 1 port E1 to HDLC converter.
- Uplinks 100M Ethernet to Gigabit trunk card of FRM220A
- Interface connectors, RJ-48C for 120? , BNC*2 for 75?.
- E1 settings.
- Line Code HDB3 or AMI.
- Full or Fractional.
- Frame setting, E1(CCS/CAS).
- Idle code setting (0x7E or 0xFF).
- Auto generate (AIS) enable, disable setting.
- Timing source setting (Receive E1 recovery or internal oscillator).
- Active timeslot number setting (E1 CCS 1-31 or E1 CAS 1-30).
- Base timeslot setting (E1 CCS 1-31, E1 CAS 1-15 or 17-31.)
- Loop Back with integral BERT
- LED indicators



Specifications

- G.703 Interface
 - Connector 1 x RJ-45 and 2 x BNC
 - Data rate 2048kb/s
 - Impedance 75 ohm for unbalanced, 120 ohm for balanced
 - Framing CCS, CAS, Unframed
 - RxSensitivity -43dB (extra Long Haul)
 - TxPulseAmp. 3.00V p-p (120 ohm); 2.73V p-p (75 ohm)
 - Line code HDB3 or AMI selectable
 - Indications LED (PWR, TD/RD act., Test, Signal loss, Sync loss,
 - Alarm, Error
- Ethernet Port 1 x RJ-45, Auto-Negotiation, Auto-MDIX
- Power (Card supports hot-swapping)
 - Input Card : 12VDC, Standalone : AC, DC options
 - Consumption <6W
- Dimensions 155 x 88 x 23mm (D x W x H)
- Weight 120g
- Temperature 0 ~ 50°C (Operating), -10 ~ 70°C (Storage)
- Humidity 10 ~ 90% non-condensing
- Certification CE (EMI/LVD), FCC, RoHS
- MTBF 75000 hrs (25°C)
- Tests (set from console)
 - E1 Loops Remote and Request Remote Loop back
 - BERT Integral 511 pattern generator (set from console)

This product includes the following models:

FRM220A-Eoe1 (Ethernet over E1 converter card)

Eoe1 “**E1 Port**” tab contains the status and E1 parameter settings. The status fields will report Signal normal or LOS, E1 sync or NoSync, Alarm Indication Signal active or not, Bit errors if running integral BERT, code violations, Loss of Multi-Frame and remote power condition (dying gasp).

E1 Port Status and Configuration

Port Active	Enable
E1 Line Code	HDB3
E1 Timing Source	Internal oscillator
E1 Line Impedance	120 ohms
E1 Idel Code	QX7E
E1 Auto Transmit AIS	Disable
E1 Frame Mode	Framed
E1 Frame Format	CCS
E1 RLB Test	OFF
E1 RRLB Test	OFF
E1 BERT Test	Disable

Time Slot	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31

Save
Cancel
Device Reset
Set to Defaults
Refresh

The “**LAN Port**” tab has the status and configuration settings for the single RJ-45 LAN port. The link status and speed/duplex will be shown (if linked). The two configuration items include auto or forced mode (10/100, full/half) selection and enable/disable 802.3x Ethernet flow control.

LAN Port Status and Configuration

Save Cancel Refresh

RMON Status and Configuration

Save Cancel Clear RMON In Clear RMON Out Refresh


A.4 FRM220A-1000EAS/X In-band (802.3ah) Managed Fiber Gigabit Media Converter

1000EAS/X is an IEEE802.3ah OAM/IP compliant in-band managed optical fiber media switch/converter for 10/100/1000Base-TX Ethernet and 1000Base-SX/LX gigabit fiber that also provides NMS functions for Link-Loss-Forwarding, Remote-Monitoring-Status, bandwidth control and Loop-Back-Test. When auto-negotiation is selected, these units will automatically tailor themselves to convert 10, 100, 1000 full or half duplex, depending on your specific network needs.

Features and Specifications

4-Ports two 10/100/1000Base-TX TP ports plus two 100/1000Base-SX/LX ports, SFP with LC

- * Store and Forward non-blocking Switching Mechanism
- * Auto-Cross over for MDI/MDIX in TP port
- * Supports Auto / Force Mode in TP port
- * Supports 4K MAC addresses
- * Supports 1Mbit Frame Buffer
- * Maximum Packet Size: 10240K Byte
- * 6 diagnostic LEDs for Power, TX link/transmit, FX link/transmit, Full/Half Duplex mode, LLF and speed.
- * Supports Link-Loss-Forwarding function
- * Supports Loop-Back, Auto Laser Shutdown, remote status, remote in-band configuration
- * Complies with IEEE 802.3 10Base-T, IEEE 802.3u 100Base-TX, IEEE 802.3z/ab 1000Base-T, IEEE 802.3x full-duplex flow control, 1000Base-SX/LX standards and IEEE 802.3ah-OAM.
- * Data Transfer Rate: 2000Mbps/full-duplex
- * Emission Compliance: FCC part 15 class A, CE, European standards EN55022:1994/A1:1995 A2:1997 Class A, EN61000-3-2:1995, EN61000-3-3:1995 and EN50082-1:1997
- * Power Consumption : < 7W
- * Temperature -10 ~ 60°C (Operating); -20 ~ 70°C (Storage)
- * Humidity 20 ~ 95% non condensing (Operating) 10 ~ 95% (Storage)
- * Dimensions 122.6mm x 85.6mm x 20mm (LxWxH)
- * Weight 120g (0.25 lb)

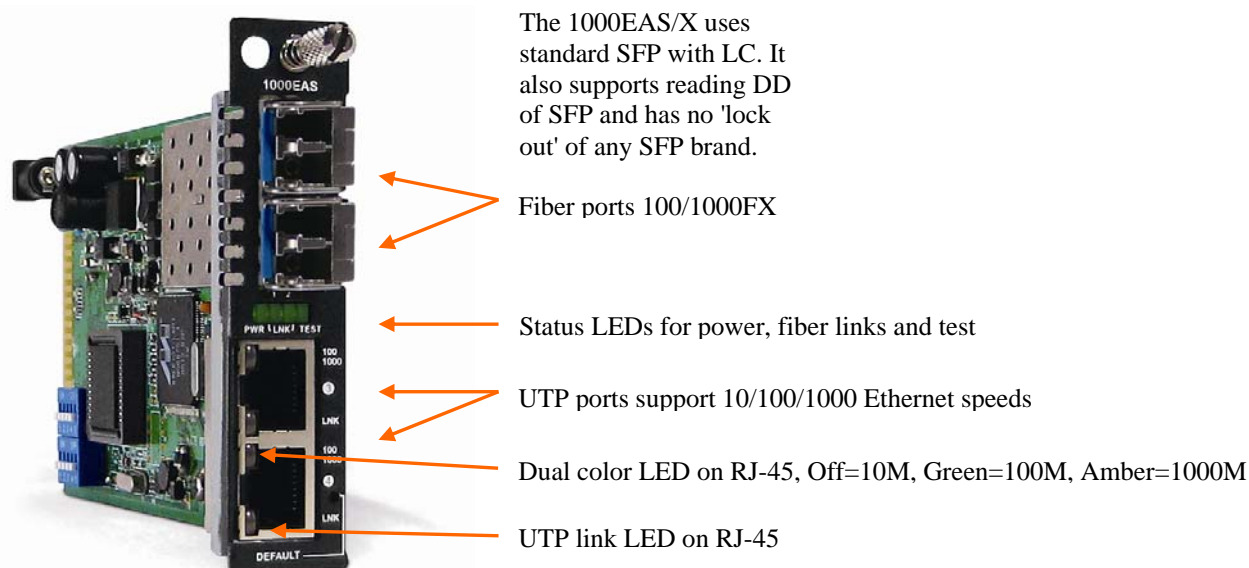

10Base-T UTP Cable Requirement

Cable type: Category 3, 4 or 5. Maximum distance: 100 meters (328 feet)

100Base-TX UTP Cable Requirement

Cable type: Category 5, minimum. Maximum distance: 100 meters (328 feet)

1000Base-TX UTP Cable Requirement

Cable type: Category 5e, minimum. Maximum distance: 100 meters (328 feet)

A.4.1 Functional Details

Ethernet

The 1000EAS/X is based on a L2 switch chip which supports non-blocking switching fabric with up to 1024 MAC lookup filtering table and support for Egress tagging/untagging selectable per port in any combination using 802.1Q VLAN support for 4094 VIDs and BPDU handling for spanning tree protocol. There are also 28 32bit and 2 64 bit RMON counters per port that can be displayed through the management system or received via SNMP standard MIB statistics.

The 10/100/1000Base RJ-45 connectors are located on the front panel of the card along with two SFP cages for industry standard 1.25Gbps SFP modules. All UTP connections are designed for auto MDI-X operation, requiring only a straight connection to any device. A unique feature of the 1000EAS/X switch/converter is the use of a common PCB card which may either be used as a standalone converter (FRM220-CH01 series) or placed in the FRM220-CH20 rack.


Management

The 1000EAS/X 4-port switch card is managed by an embedded 32 bit CPU. When installed in the FRM220A CH20 chassis, control and monitoring are passed to the GSW/SNMP. **There are no DIP switches or manual settings on the card.** If the switch is placed stand-alone, without local or remote connection to FRM220A GSW/SNMP management, the switch can be managed by its own Telnet terminal connection, via web based GUI or by SNMP protocol.


Link Fault Pass Through (AKA LFP)

This switch/converter incorporates a Link Forwarding feature based on standard IEEE802.3u which allows indirect sensing of a Fiber or UTP Link Loss via both the 10/100/1000 Base-TX UTP and 1000Base-SX/LX connections. When this feature is enabled and the media converter detects a Link Loss condition on the Receive fiber (Fiber LNK down), immediately sends a standard IEEE802.3u Far End Fault code by Transmit fiber to the remote converter and it disables its UTP transmitter so that a Link Loss condition will be sensed on the receive UTP port. (See the following figure) The link loss can then be sensed and reported by a Network Management agent at the host equipment of local and remote UTP port and at the local fiber port. **This feature is disabled by default.**

Broken Fiber, remote receive

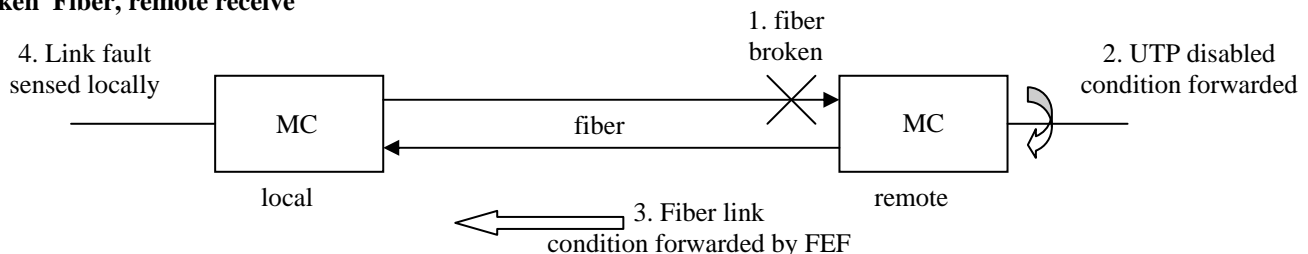


Remote UTP disconnected

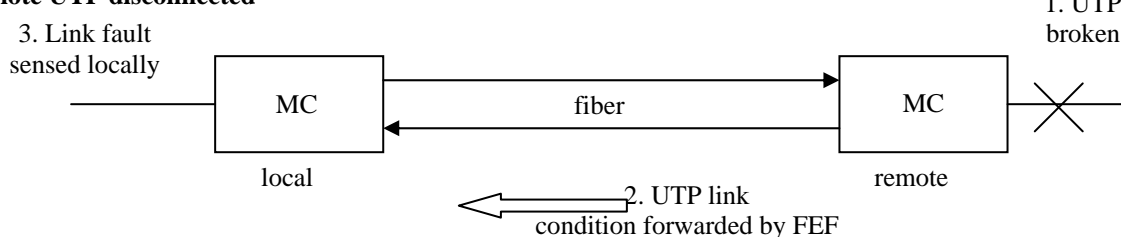


Far End Fault (FEF)

The Far End Fault or **FEF feature is a built-in part of the 802.3ah OAM.** Besides alerting the local MC of a remote fiber receive transmission break, the FEF is also used in reporting remote power failure or dying gasp.

Remote Rx fiber Broken

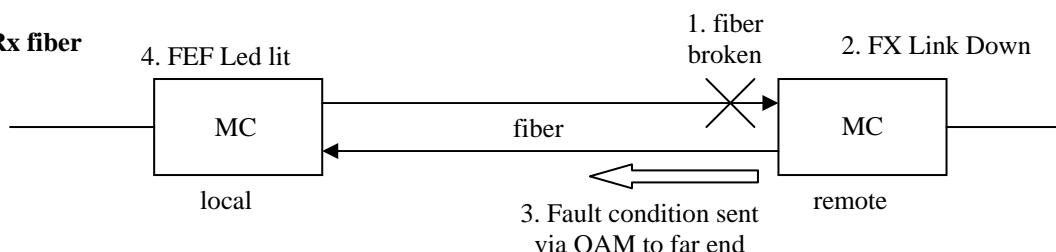

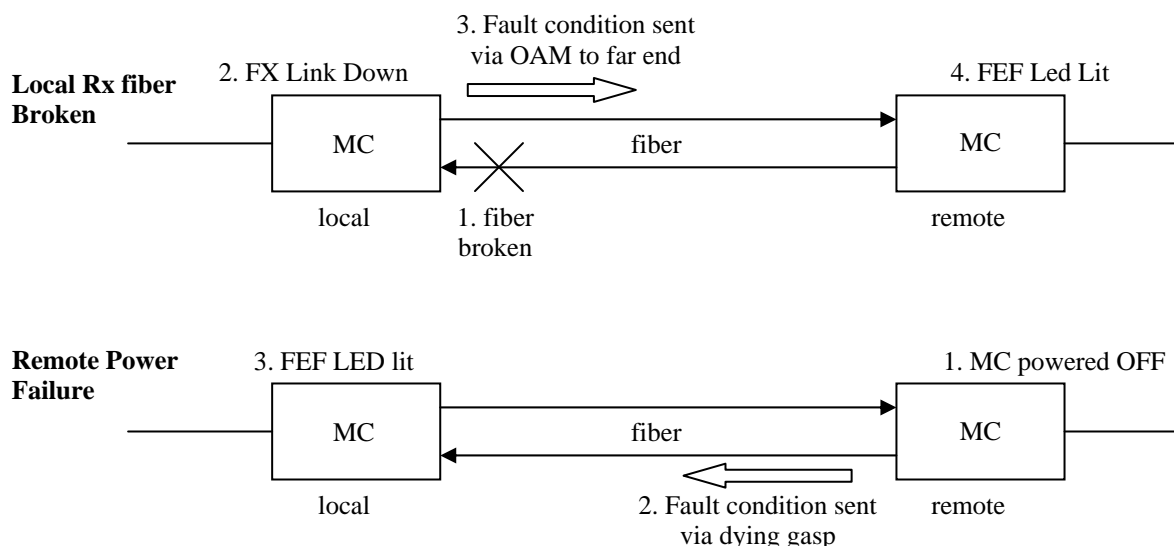

LED Status Indicators


LED	Function	State	Status
PWR	Power indicator	On	Converter has power.
		Off	Converter has no power or has been disabled.
Link 1	Fiber link	On	Fiber CH1 link is ok.
		Off	No link or the link is faulty.
		Blinking	Receiving data on fiber CH1.
Link 2	Fiber link	On	Fiber CH2 link is ok.
		Off	No link or the link is faulty.
		Blinking	Receiving data on the fiber CH2.
TEST	Test active	On	OAM Loopback test is active
		Off	Normal, no test active
(RJ-45 LEDs)			
100	mode display	On	Amber UTP side is operating in 1000Mbps mode.
		On	Green UTP side is operating in 100Mbps mode.
		Off	UTP side is operating in 10Mbps mode
Link	Ethernet link	On	The UTP link is ok.
		Off	No link or the link is faulty.
		Blinking	Receiving data on Ethernet.

Bandwidth Control


The bandwidth control in this converter provides granularity choices of 64k, 1M, or 100M to support a range from 64kbps to 900Mbps. The 1000EAS/X has 4 ports, 2 electrical plus 2 optical. In the user interface we define 'Ingress' as traffic flowing into a port and 'Egress' as traffic flowing out of a port. Each port has individual Ingress and Egress settings. Inherent in the design of the Marvell switch chip, Ingress rate limiting does not use 802.3X flow control, which results in packets dropped when the rate limit is reached. Flow control allows reasonable bandwidth control of layer 7 applications (FTP, WEB, etc.) without dropping packets. Egress rate limit, however, uses flow control, when enabled. Therefore the recommended method for setting up rate limiting is by using only Egress rate limiting and setting it per port. Ingress rate limiting can also be set as long as it is understood that packets are dropped once the limit is reached. Also, if flow control (802.3X) is disabled, then egress limiting will also drop packets when rate limit is reached.

The example below shows the 1000EAS/X.

1. Only use the Egress setting and leave Ingress set to unlimited.
2. For two way bandwidth control, set Egress rate at CO side and at Remote side individually to attain 2-way bandwidth control.

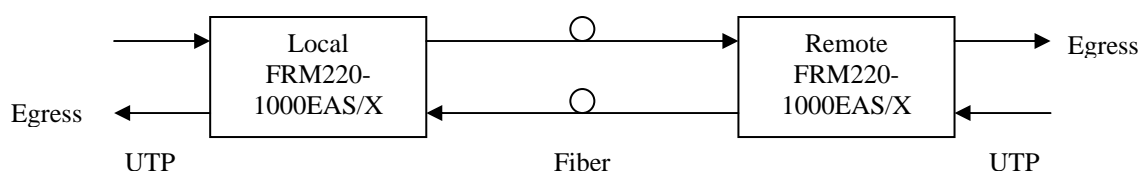

A.4.2 Block Diagram of 1000EAS/X

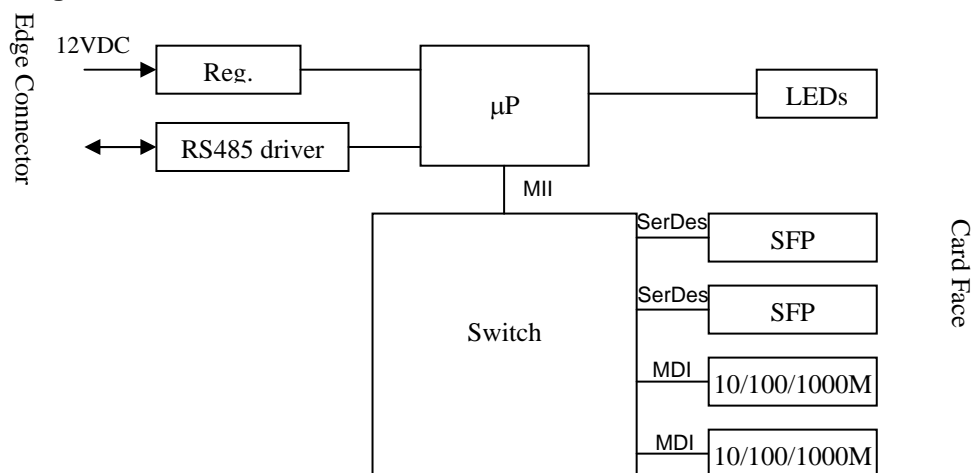

(For reference only)

A.4.3 1000EAS/X Stand-alone Telnet Configuration

Because the FRM220A-1000EAS/X has its own comprehensive user manual, this manual will not go into the detailed configuration of this device. Please refer to the FRM220A-1000EAS/X User Manual for configuration details.



www.ctcu.com

T +886-2 2659-1021 **F** +886-2 2659-0237 **E** info@ctcu.com



ISO 9001 Quality System Certified CTC Union Technologies Co.,LTD.

All trademarks are the property of their respective owners. Technical information in this document is subject to change without notice.